SHARP SERVICE MANUAL

CODE : 00ZARD22//A1E

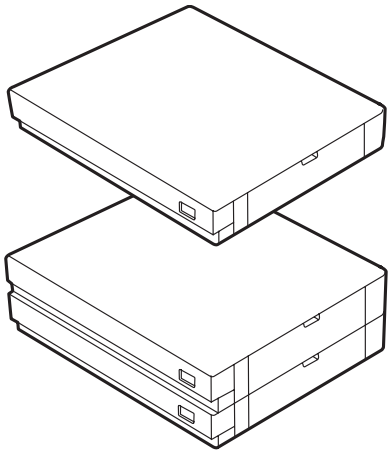

Digital copier
: Paper feed unit

MODEL AR-D21 (1-Stage paper feed unit)
AR-D22 (2-Stage paper feed unit)

CONTENTS

[1] GENERAL 1

[2] SPECIFICATIONS 1

[3] UNPACKING AND INSTALLATION 1

[4] EXTERNAL VIEW AND INTERNAL STRUCTURE 6

[5] OPERATION DESCRIPTION 7

[6] DISASSEMBLY AND ASSEMBLY 7

[7] MAINTENANCE 9

[8] ELECTRICAL SECTION 10

Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

[1] GENERAL

The AR-D21 (1-stage paper feed unit) and the AR-D22 (2-stage paper feed unit) are optional paper feed units added to the digital copier, and their cassettes are common with those of the main machine.

[2] SPECIFICATIONS

1. Paper feed unit (AR-D21/AR-D22)

	AR-D21	AR-D22
No. of stage	1-stage	2-stage
Capacity	550 pages x 1 stage (Japan)	550 pages x 2 stages (Total 1,100pages) (Japan)
	500 pages x 1 stage (EX)	500 pages x 2 stages (Total 1,000 pages) (EX)
	(Note) Japan: 64g/m^2, EX: 80g/m^2	
Size detection	No (The paper size is set with the user program.)	
Paper empty detection	Provided	
Paper feed size	A3, B4, A4, A4R, B5, B5R, 16k, 16kR, 8k, 11 x 17, 8.5 x 14, 8.5 x 13, 8.5 x 11, 8.5 x 11R	
Size when shipping	AB series: A4	
	Inch series: 8.5 x 11	
Size selection	User selection (Set by the user program.) A3, B4, A4, A4R, B5, B5R, 11 x 17, 8.5 x 14, 8.5 x 13, 8.5 x 11, 8.5 x 11R	
Cassette installation	Installed by the user.	
Heater	Provided only for Japan.	
Power source	Supplied from the copier. DC24V.	
Power consumption	5.6W	8.4W
Drive supply	• When installed as the 2-stage cassette for the 2-stage cassette standard model: Supplied via gears from the copier. • When installed as the optional 2-stage or 3-stage cassette: Sup plied by the individual motor.	Supplied by the individual motor.
External dimensions	596(W) x 498(D) x 97(H) mm	596(W) x 498(D) x 194(H)mm
Weight	About 6.1kg	About 11.8kg

[3] UNPACKING AND INSTALLATION

1. Unpacking

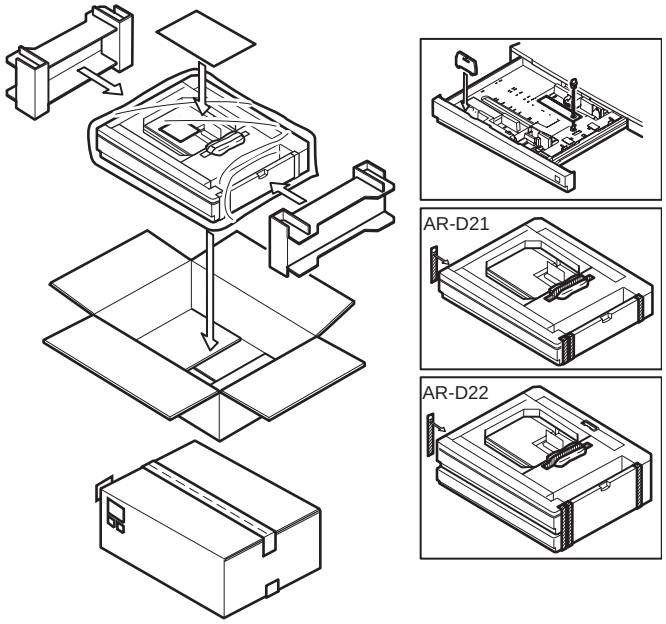

2. Installation

PARTS INCLUDED

Screws (M4 x 12): 8 pcs.

Fixing plates: 4 pcs.

Paper size label



Cassette relay harness
(contained in the optional paper feed unit)

Remove all pieces of fixing tape and fixing materials from the paper feed unit.

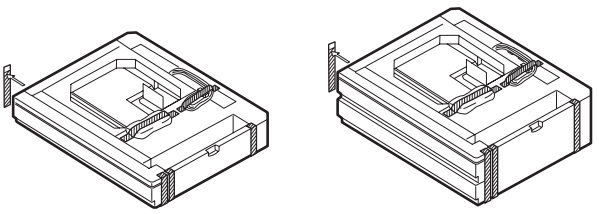

Turn off the main switch of the copier and then remove the power plug of the copier from the outlet.

1. Remove the rear cover from the copier.

Remove the two screws and then remove the rear cover from the copier.

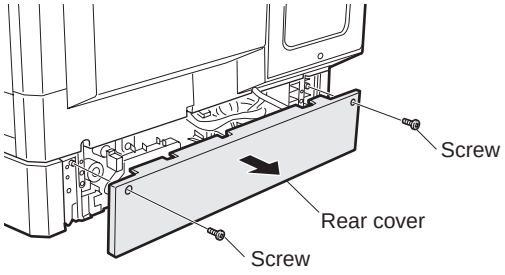

2. Remove the rear cover from the optional paper feed unit.

Remove the two screws and then remove the rear cover from the optional paper feed unit.

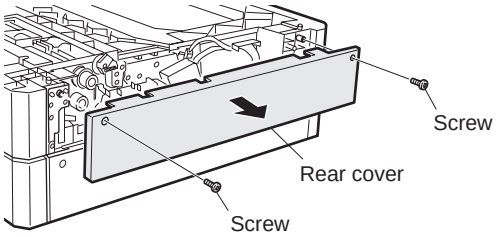

3. Remove the connector cover.

Remove the cover from the connector.

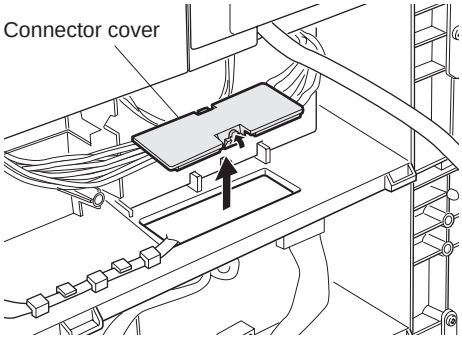

4. Attach the copier

Place the copier on the optional paper feed unit and remove the second and third paper trays.
Connect the copier to the paper feed unit using four fixing plates and two screws (M4 x 12) for each plate.

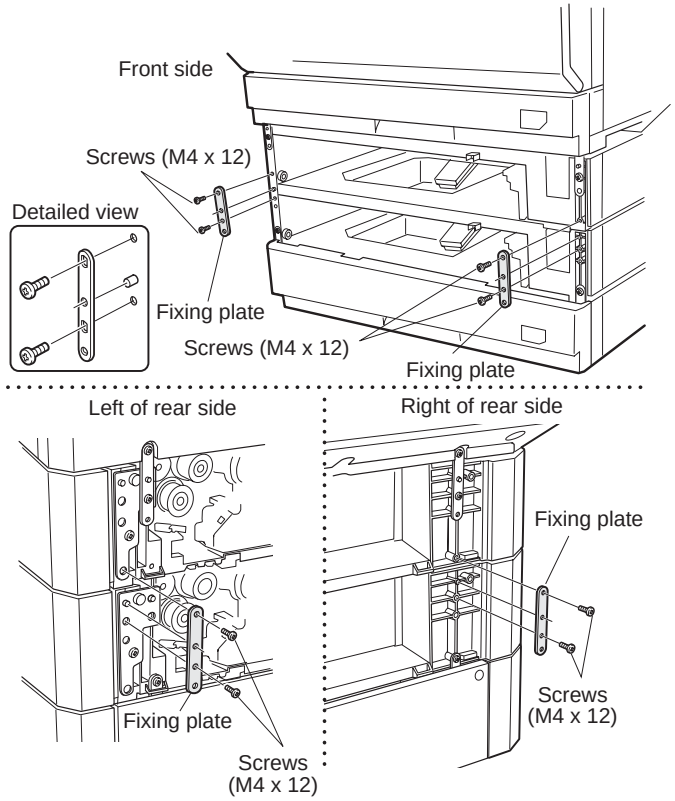

5. Connect the harness.

Connect the cassette interface harness contained in the optional paper feed unit to the paper feed unit interface PWB.

• For two tray type

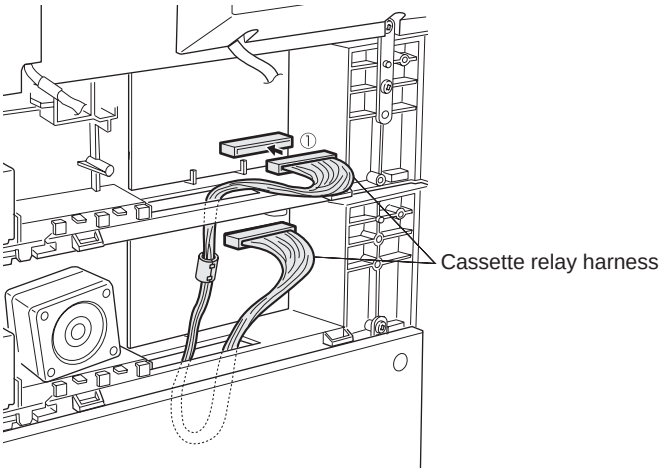

• For one tray type

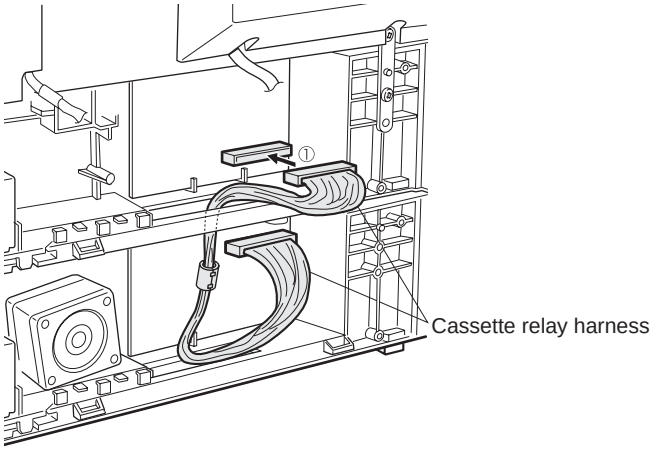

6. Attach the rear covers of the copier and the optional paper feed unit.

Attach the rear covers of the copier and the optional paper feed unit using two screws respectively.

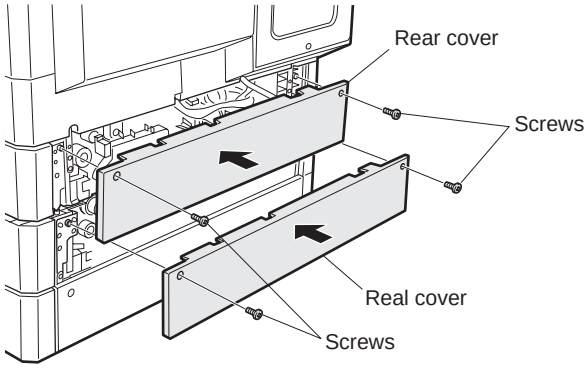

7. Remove the securing fixture for packing the paper feed unit and remove the packing material.

Remove the securing fixture for packing that fixes the paper pressure plate of the tray by rotating it in the direction of the arrow and remove the packing material.

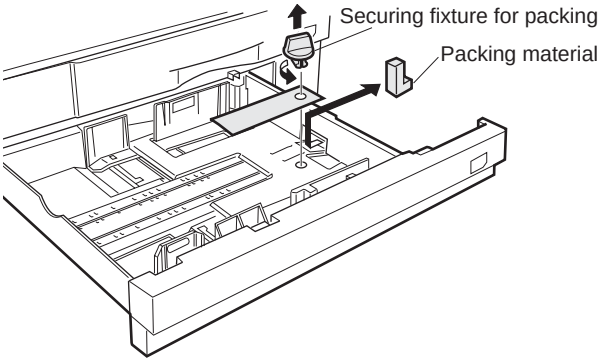

Caution: Be sure to remove the securing fixture bofore turning on the power.

8. Change the paper size in the tray.

Hold the grip and slide the cassette side plate to adjust it to the paper to be used.
Then, fit the rear end plate to the specified size position.

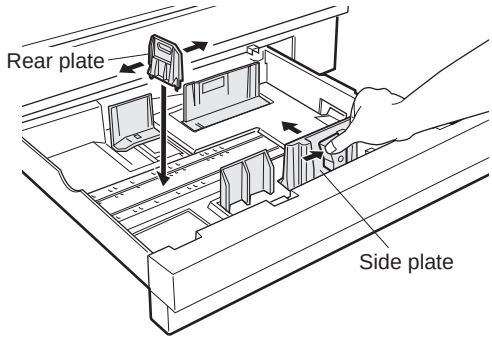

Insert the power plug of the copier to the outlet and turn on the main switch of the copier. Then, carry out the following procedure.

9. Load paper into the paper tray.

Do not exceed the maximum height line.

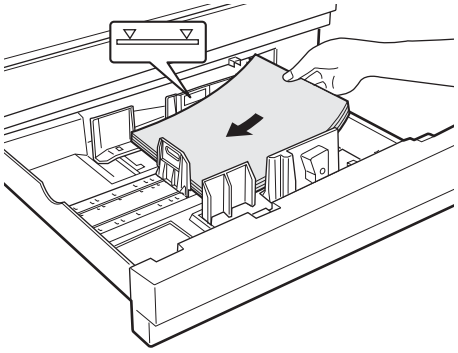

10. Check for center displacement.

• Set an original on the document glass and copy it using the paper tray in the copier.
Then, copy an original using the attached optional paper feed unit.

• If the center of the copy image from the tray in the copier is different from that of the copy image from the optional paper feed unit, carry out adjustment referring to the service manual.

Installation of Paper feed unit is now complete.

[4] EXTERNAL VIEW AND INTERNAL STRUCTURE

1. External view

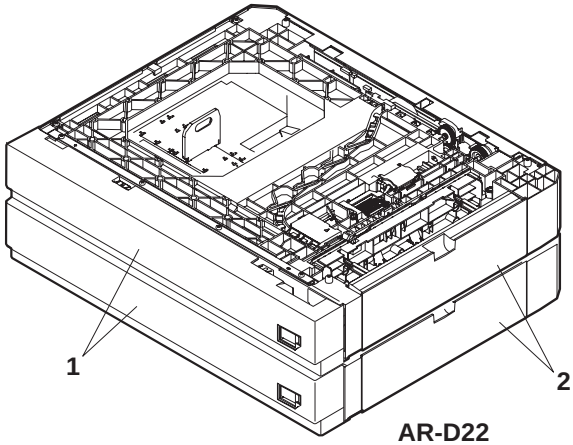

AR-D22

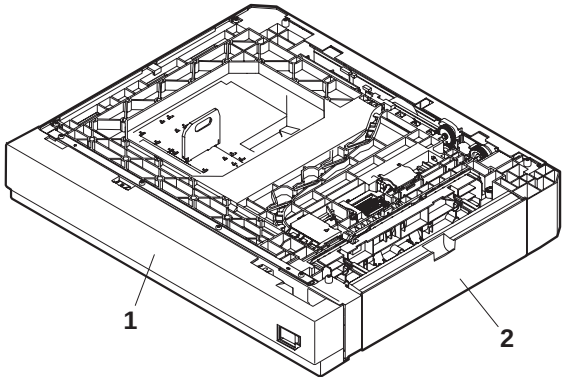

AR-D21

No.	Name
1	Paper feed tray
2	Paper feed right cover

2. Internal strecture

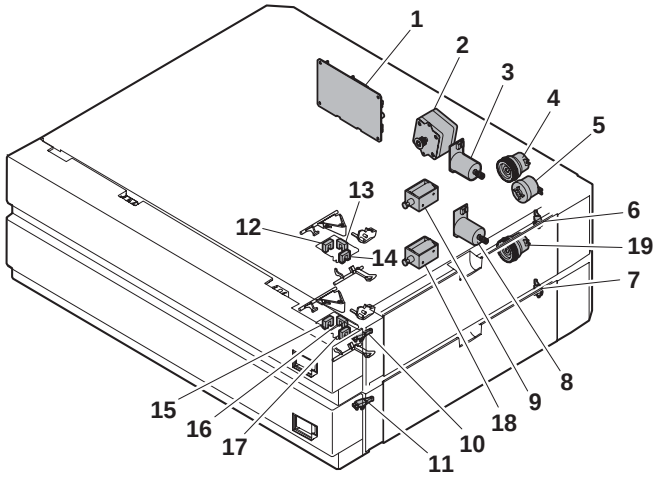

Moter and sensor solenoid etc.

No.	Code	Name	Type	Function/Operation	Remark
1	PWB	Interface PWB			
2	DM	Drive motor	Hybrid	Drives gears.	
3	LUM3	Lift-up motor (No. 1 tray)			
4	CPFS3	Paper feed clutch	Electromagnetic clutch	Rotates the paper feed roller.	
5	TRC3	Transport clutch	Electromagnetic clutch	Rotates the transport roller.	
6	CD3	Cassette detection SW	Contact	Detects cassette empty.	
7	CD4	Cassette detection SW	Contact	Detects cassette empty.	AR-D22 only
8	LUM4	Lift-up motor (No. 2 tray)			
9	CPFC3	Paper feed solenoid	DC solenoid	Feeds paper.	
10	DSWR3	Door open/close detection SW	Contact	Detects door open/close.	
11	DSWR4	Door open/close detection SW	Contact	Detects door open/close.	AR-D22 only
12	PED3	Paper empty sensor	Photo transmission	Detects paper empty in the cassette.	
13	LUD3	Upper limit sensor	Photo transmission	Detects the upper limit for paper pickup.	
14	PFD3	Paper entry sensor	Photo transmission	Detects paper transport.	
15	PED4	Paper empty sensor	Photo transmission	Detects paper empty in the cassette.	AR-D22 only
16	LUD4	Upper limit sensor	Photo transmission	Detects the upper limit for paper pickup.	AR-D22 only
17	PFD4	Paper entry sensor	Photo transmission	Detects paper transport.	AR-D22 only
18	CPFC4	Paper feed solenoid	DC solenoid	Feeds paper.	AR-D22 only
19	CPFS4	Paper feed clutch	Electromagnetic clutch	Rotates the paper feed roller	AR-D22 only

[5] OPERATION DESCRIPTION

1. Paper transport path

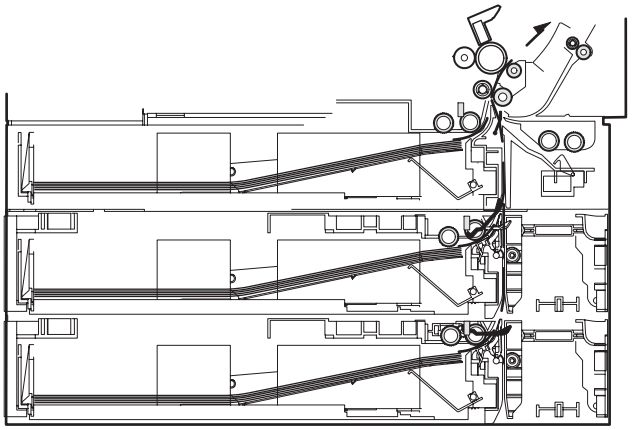

2. Operation descriptions

The operations of this unit is controlled by the copier, and the pickup roller, the paper feed roller, etc. are driven by the drive motor. Paper picked up by the pickup roller is transported by the paper feed roller, detected by the paper entry sensor, and fed to the resist roller.

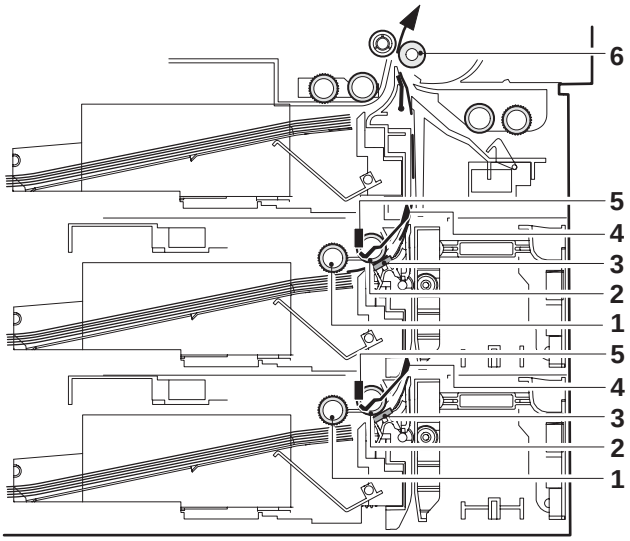

No.	Part name	Operation
1	Pickup roller	Picks up paper.
2	Paper feed roller	Transports paper.
3	Separation sheet	Press paper to the paper feed roller.
4	Paper entry detection ACT	Detects transport of paper.
5	Paper entry sensor	Detects transport of paper.
6	Resist roller	Synchronizes the paper lead edge and the image lead edge.

[6] DISASSEMBLY AND ASSEMBLY

For disassembly, follow instructions of illustrations 1, 2, 3, ... in this sequence. For assembly, reverse the disassembly procedures.
For replacement of parts described in this manual, refer to the Parts Guide.

1. Paper feed solenoid

1 - 1

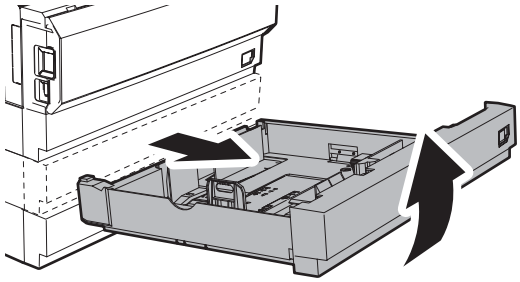

1 - 2

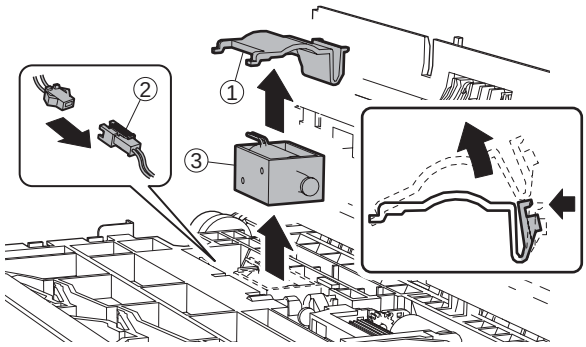

2. Paper feed roller

Refer to 1 - 1.

2 - 1

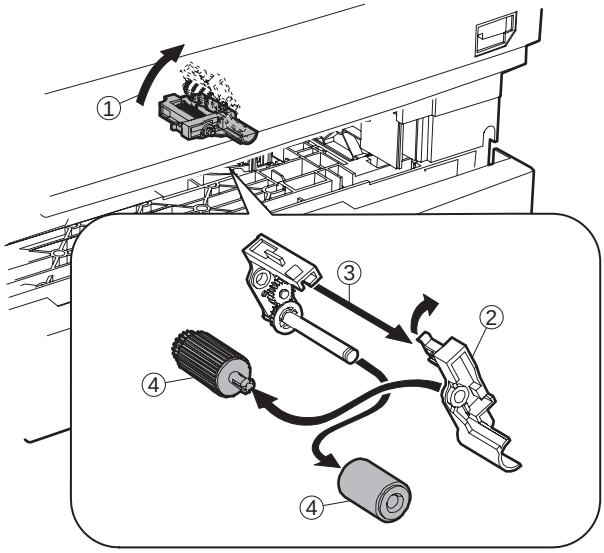

3. Motor, Clutch, Belt, Sensor PWB, Dehumidifier heater

3 - 1

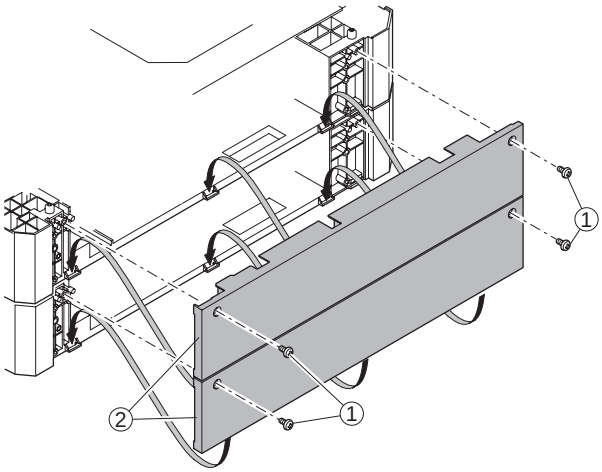

A. Drive motor

3 - A - 1

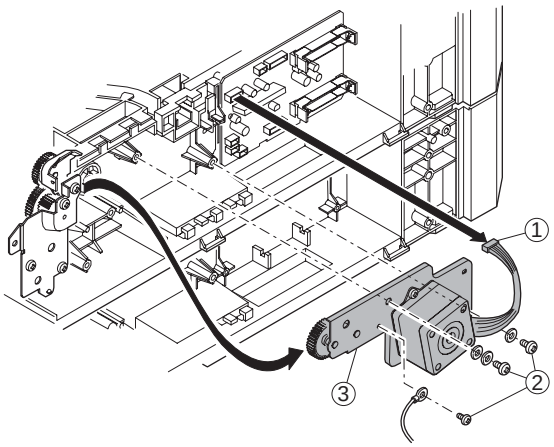

3 - A - 2

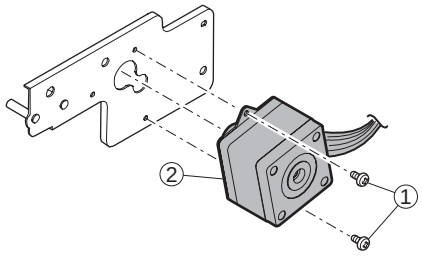

B. Lift-up motor

3 - B - 1

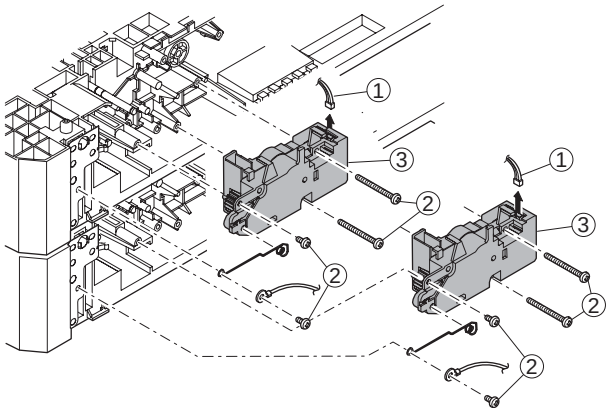

3 - 5

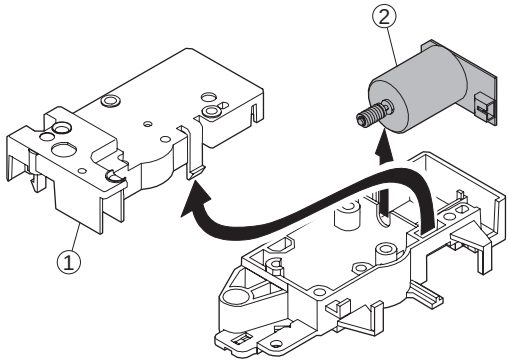

C. Paper feed clutch, Transport clutch

3 - C - 1

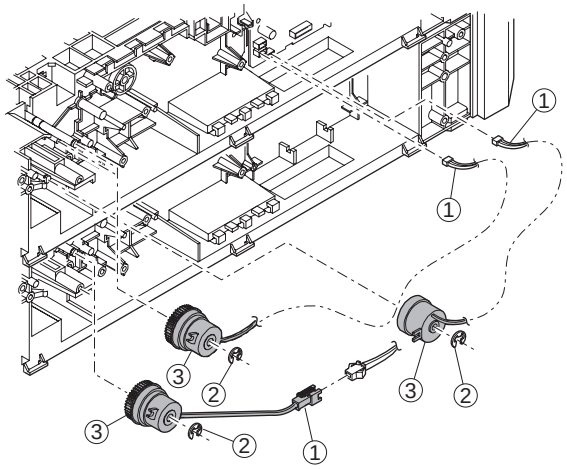

D. Belt

Refer to 3 - A - 1.

3 - D - 1

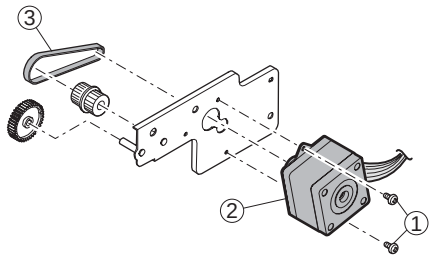

3 - D - 2

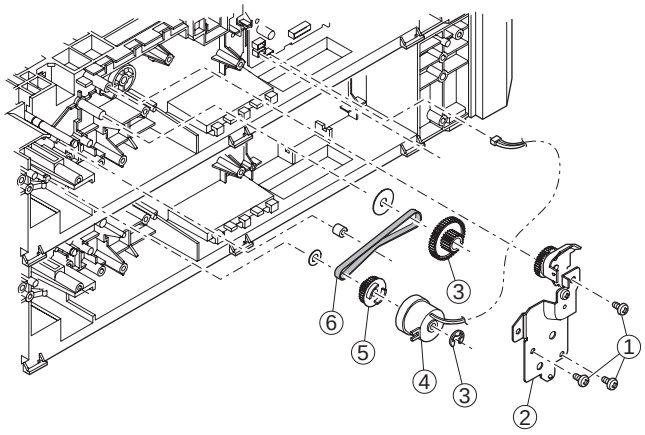

E. Sensor PWB

3 - E - 1

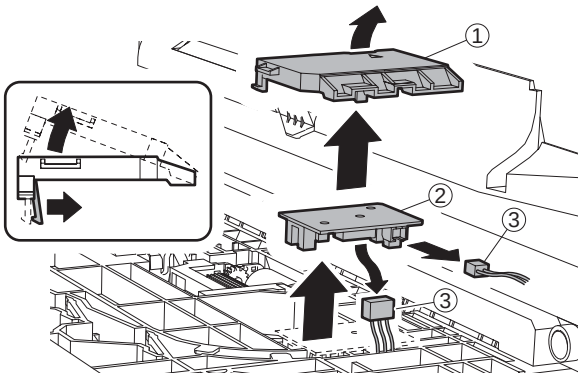

[7] MAINTENANCE

No.	Name	Work item	When service call
1	Pickup roller	Cleaning	50K
2	Paper feed roller	Cleaning	50K
3	Separation sheet	Cleaning	50K

For the replacement method of the pickup roller and paper feed roller, refer to “[6] DISASSEMBLY AND ASSEMBLY”.

No.	Name	Work item	When service call
1	Pickup rollor	Replacement	100K
2	Paper feed roller	Replacement	100K
3	Separation sheet	Replacement	100K

[8] ELECTRICAL SECTION

1. BLOCK DIAGRAM

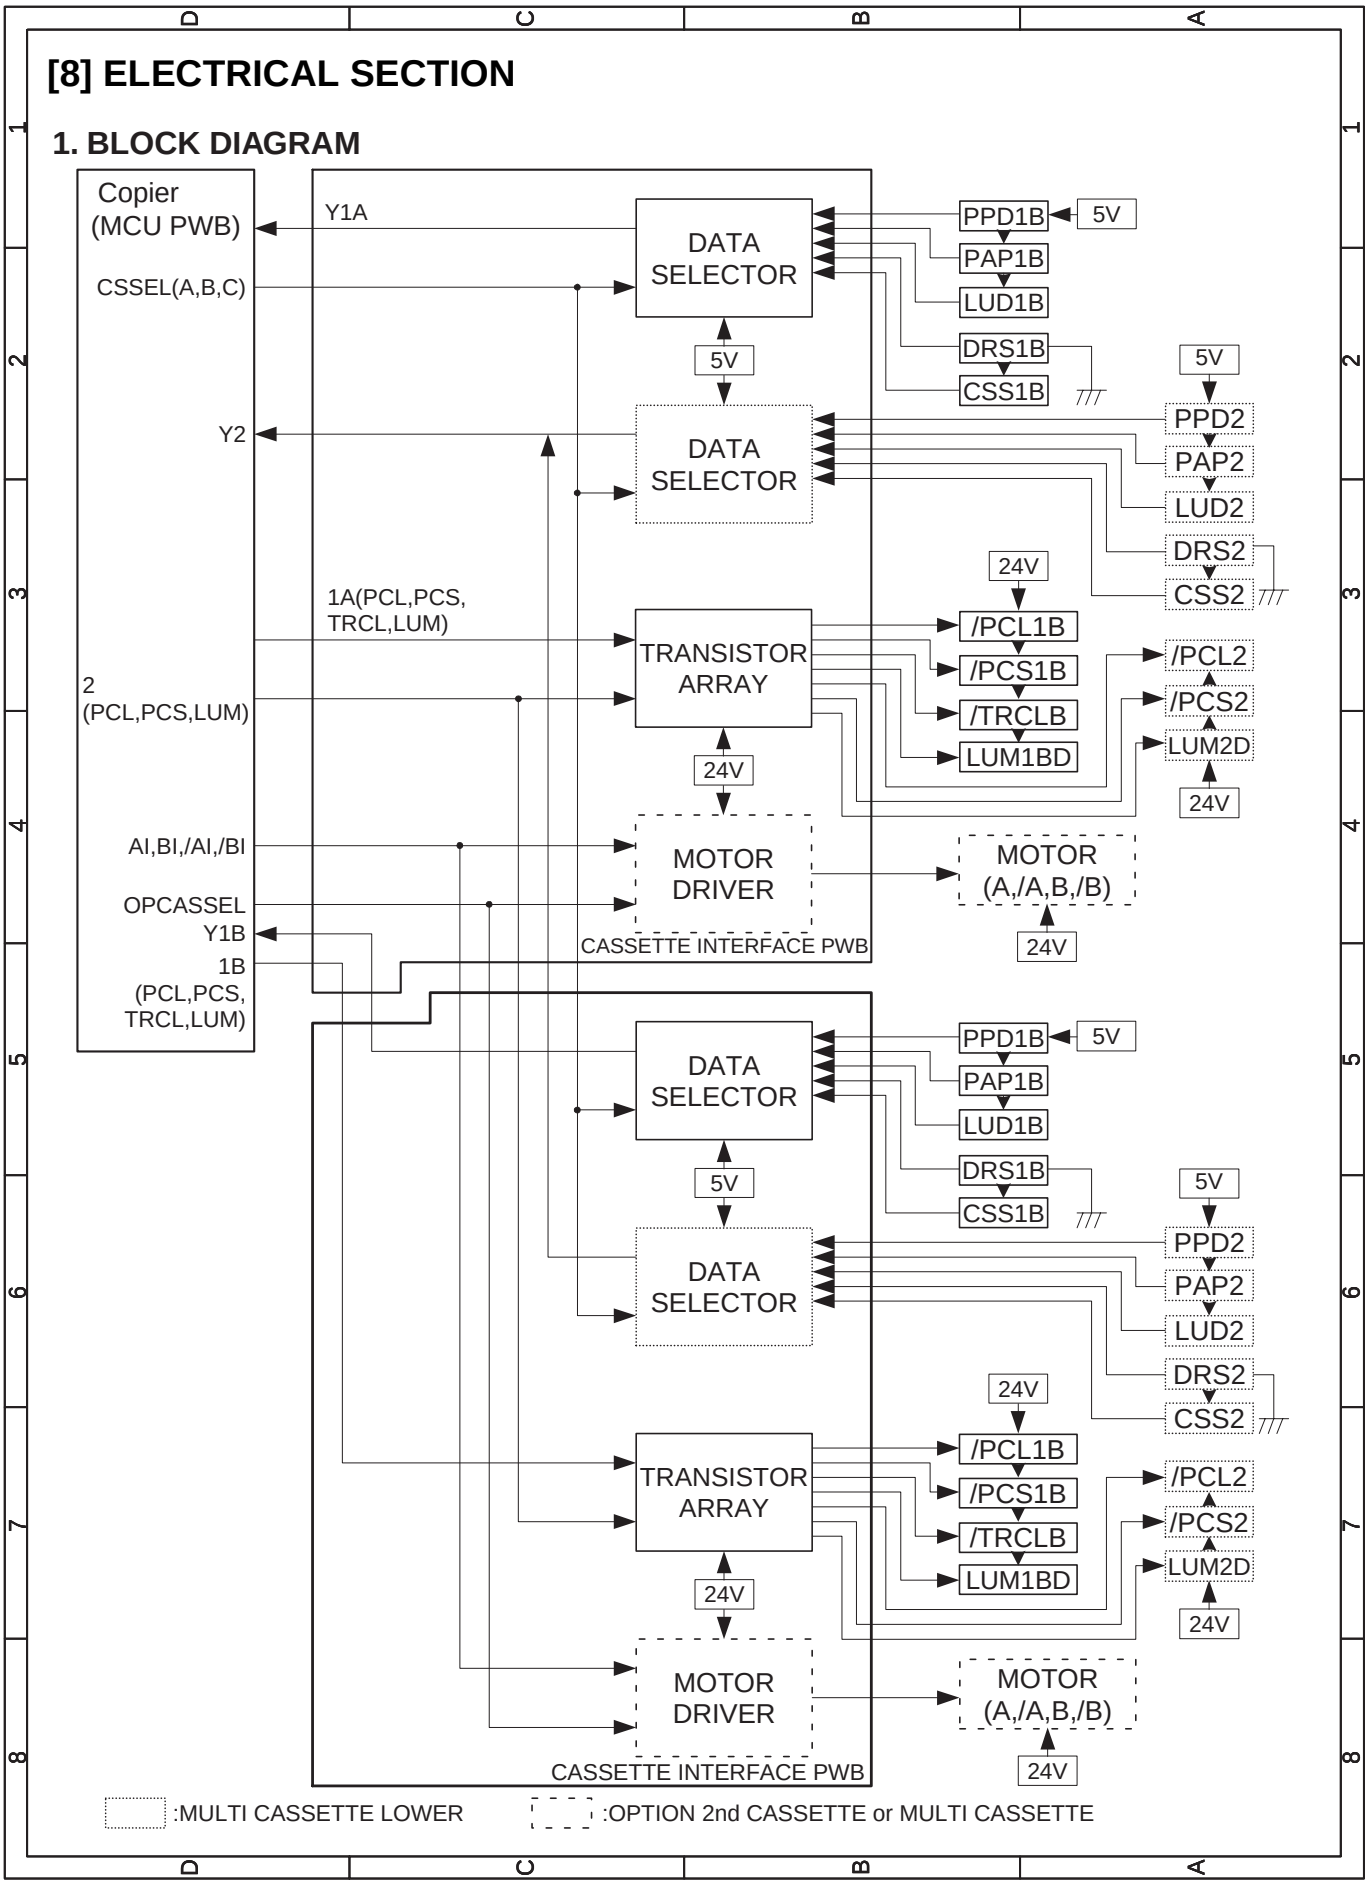

2. Actual wiring diagram

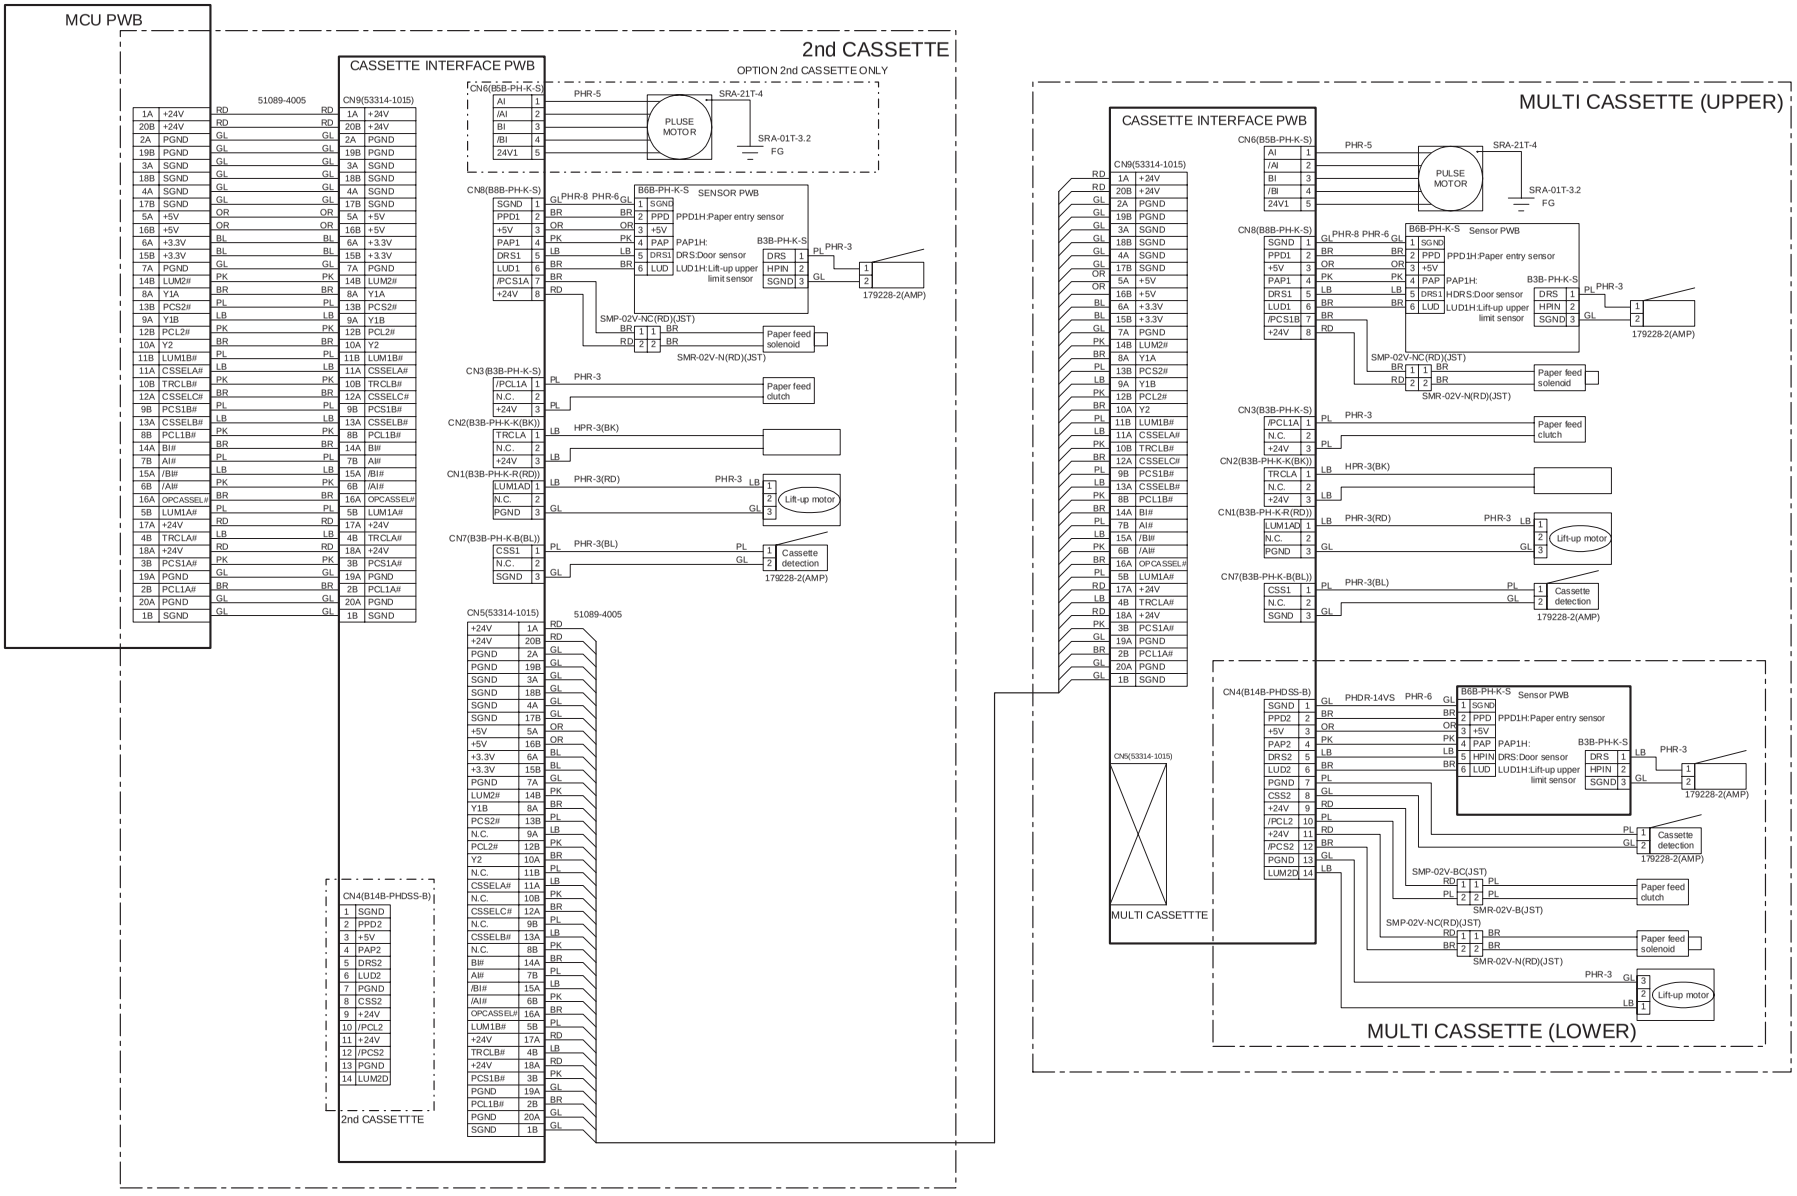

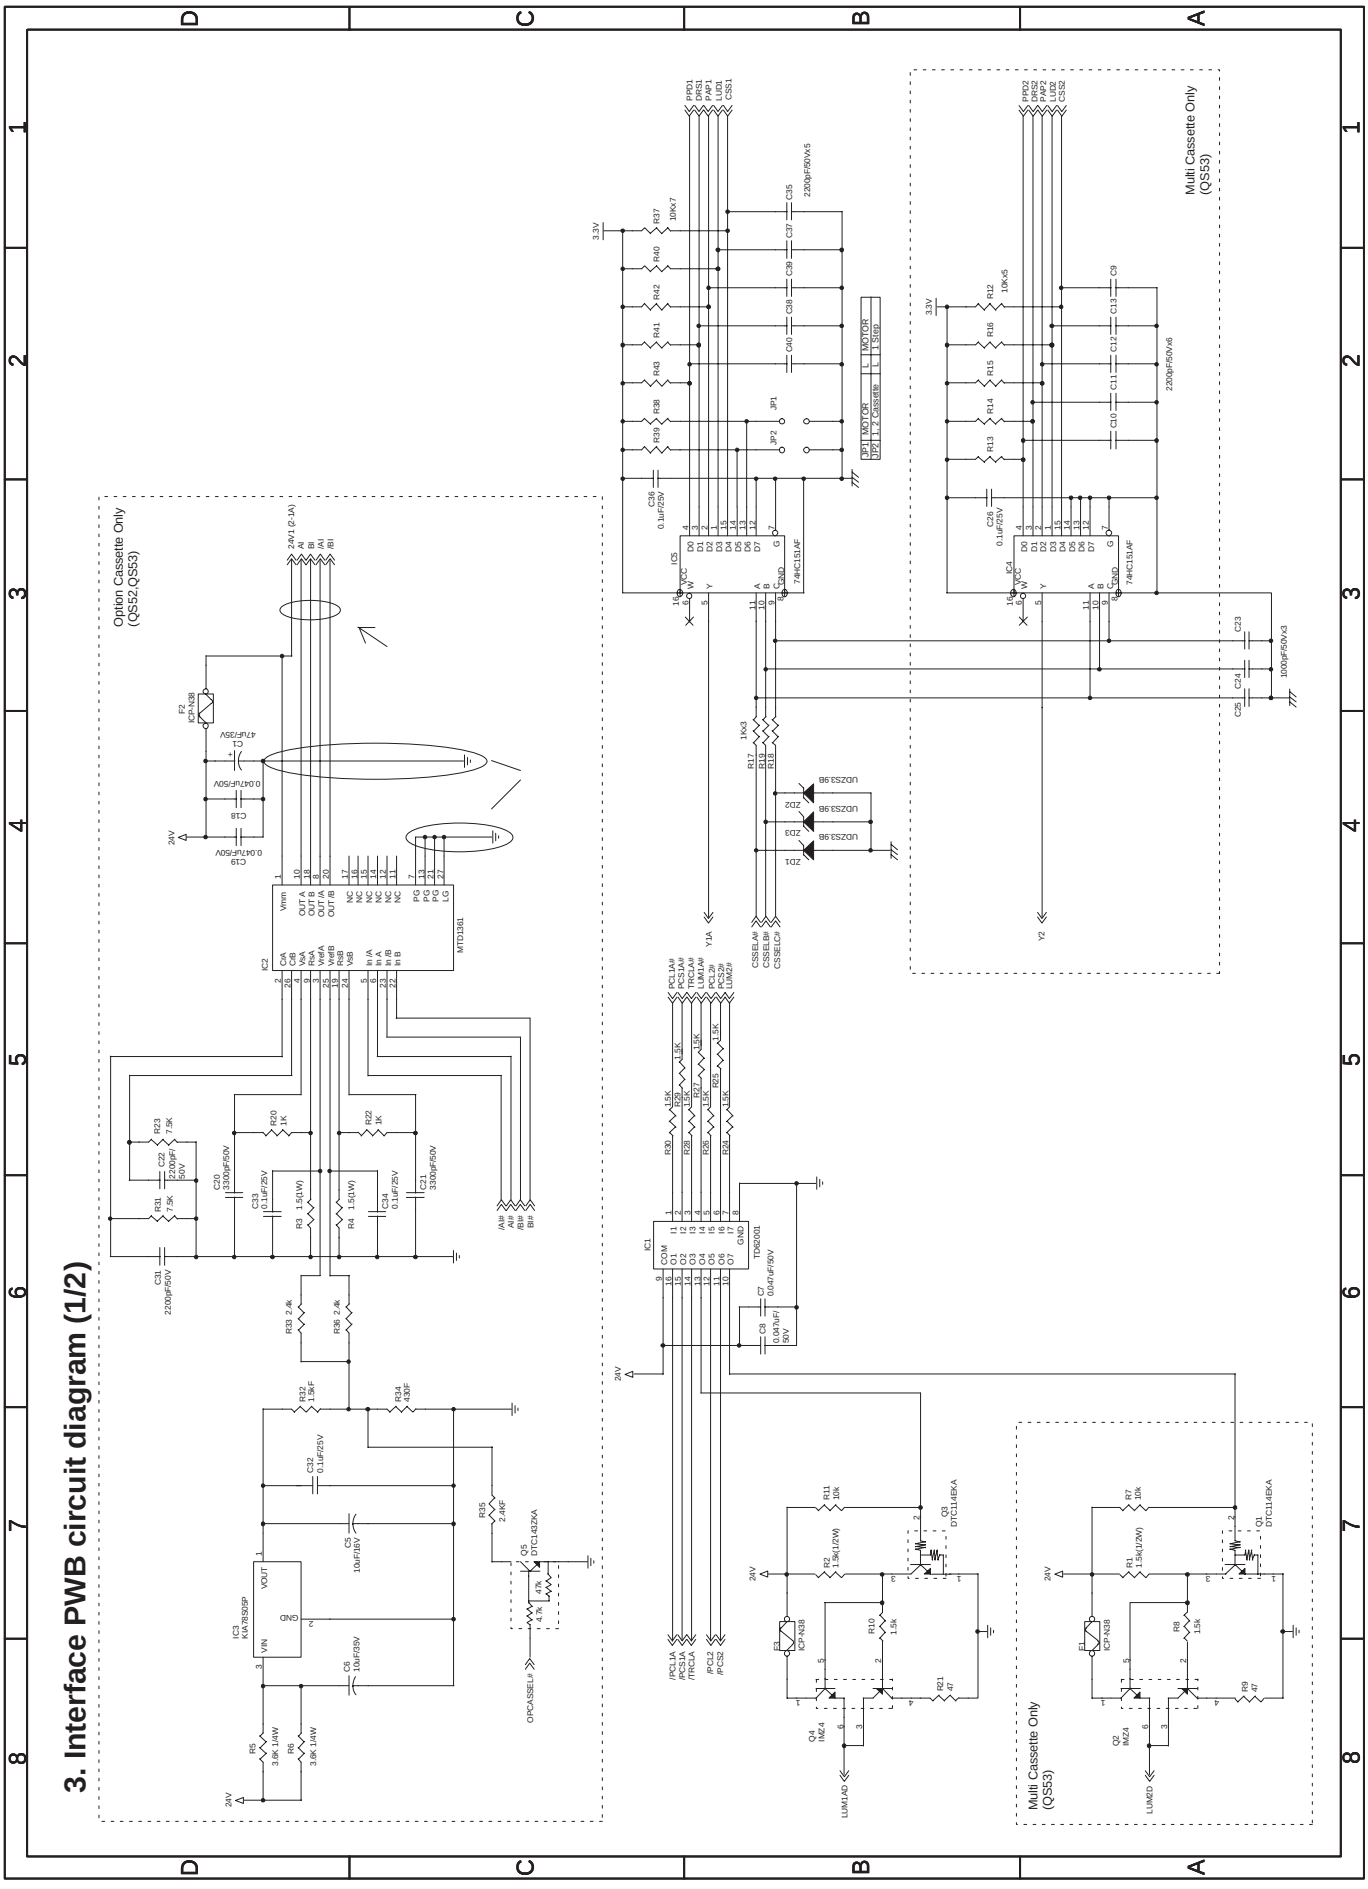
3. Interface PWB circuit diagram (1/2)
Option Cassette Only
(QS52,QS53)
Multi Cassette Only
(QS53)
Multi Cassette Only
(QS53)
IC1
TD62001
IC2
MTD1961
IC3
KIA78S05P
IC4
74HC151AF
IC5
74HC151AF
JP1
JP2
MOTOR
Y1A
Y2
24V
3.3V
GND
VCC

3. Interface PWB circuit diagram (2/2)

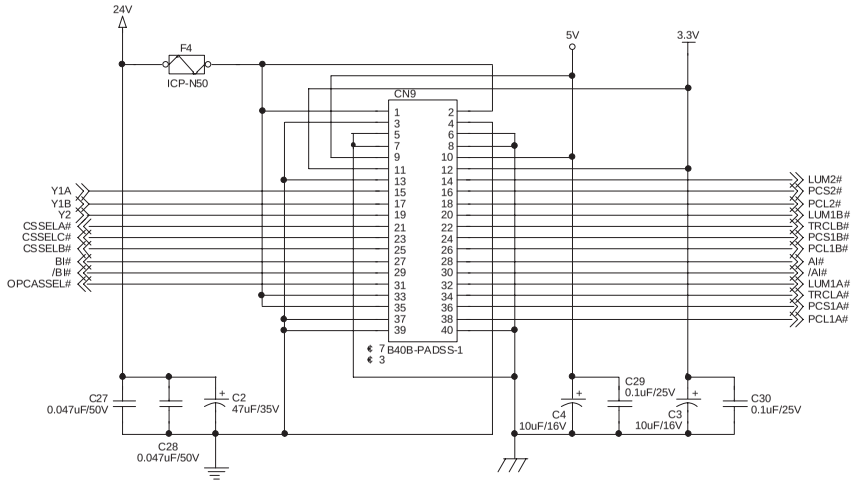

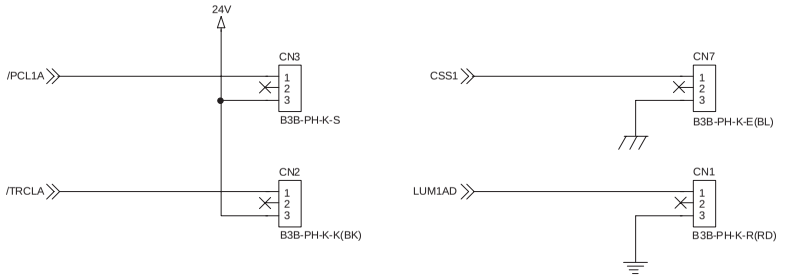

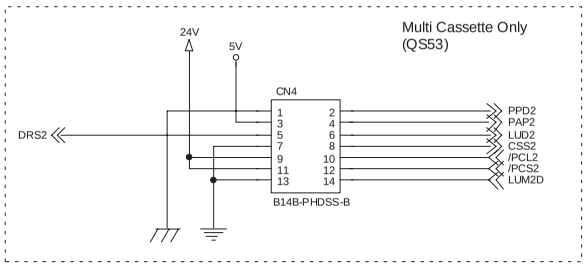

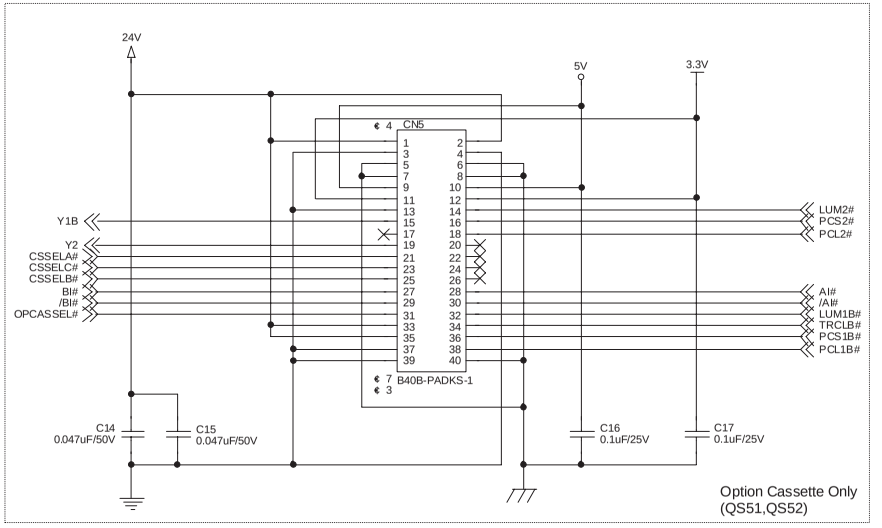

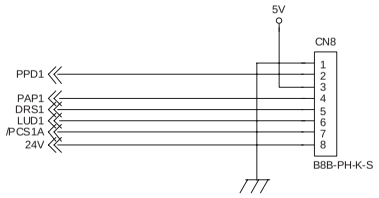

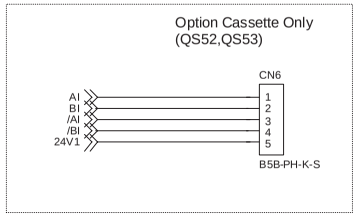

NOTE
QS51:STANDARD 2ND CASSETTE
QS52:OPTION 2ND CASSETTE
QS53:OPTION MULTI CASSETTE

4. Sensor PWB circuit diagram

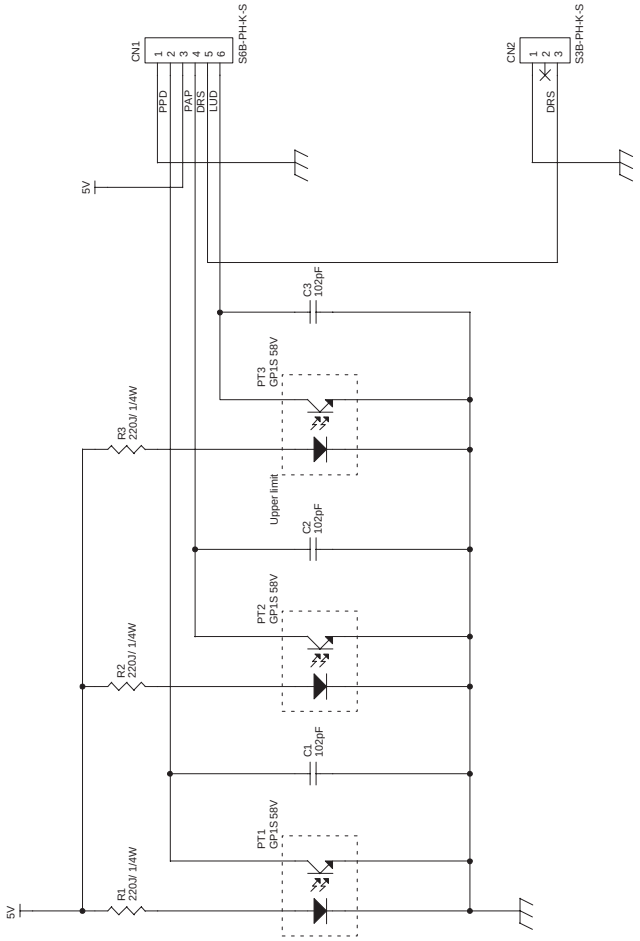

5. Parts layout

1) Cassette interface PWB

a. Parts surface

CN6 (B5B-PH-K-S)

5	24V1
4	/B1
3	B1
2	/A1
1	A1

CN2 (B3B-PH-K BL)

3	+24V
2	N.C.
1	TRCLA

CN1 (B3B-PH-K-R RD)

3	PGND
2	N.C.
1	LUM1AD

CN3 (B3B-PH-K-S)

3	+24V
2	N.C.
1	/PCL1A

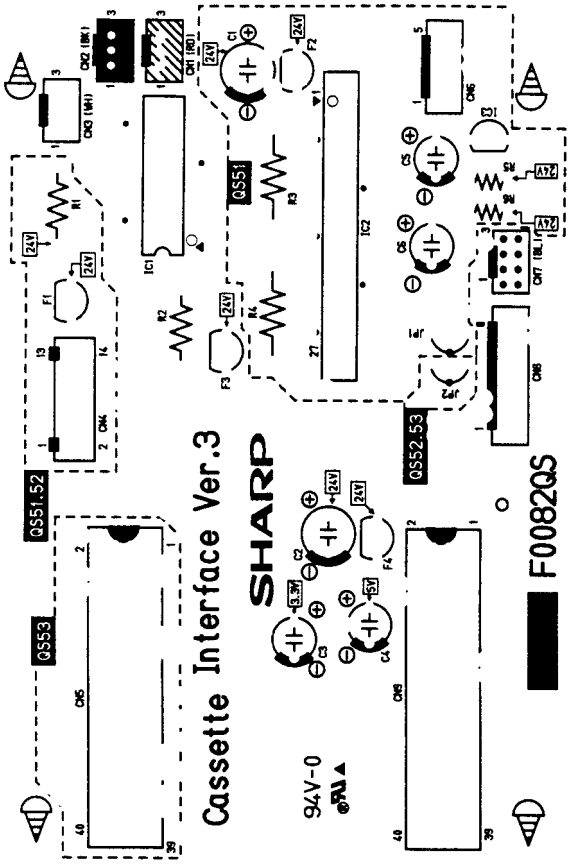

CN7 (B3B-PH-K BL)

3	SGND
2	N.C.
1	CSS1

CN8 (B8B-PH-K-S)

8	+24V
7	/PCS1B
6	LUD1
5	DRS1
4	PAP1
3	+5V
2	PPD1
1	SGND

CN4 (B14B-PHDSS-B)

13	PGND	14	LUM2D
11	+24V	12	/PCS2
9	+24V	10	/PCL2
7	PGND	8	CSS2
5	DRS2	6	LUD2
3	+5V	4	PAP2
1	SGND	2	PPD2

CN5 (53314-1015)

2	+24V	1	+24V
4	PGND	3	PGND
6	SGND	5	SGND
8	SGND	7	SGND
10	+5V	9	+5V
12	+3.3V	11	+3.3V
14	LUM2#	13	PGND
16	PCS2#	15	Y1B
18	PCL#	17	N.C.
20	N.C.	19	Y2
22	N.C.	21	CSSELA#
24	N.C.	23	CSSELC#
26	N.C.	25	CSSELB#
28	A1#	27	B1#
30	/A1#	29	/B1#
32	LUM1B#	31	OPCASSEL#
34	TRCLB#	33	+24V
36	PCS1B#	35	+24V
38	PCL1B#	37	PGND
40	SGND	39	PGND

CN9 (53314-1015)

2	+24V	1	+24V
4	PGND	3	PGND
6	SGND	5	SGND
8	SGND	7	SGND
10	+5V	9	+5V
12	+3.3V	11	+3.3V
14	LUM2#	13	PGND
16	PCS2#	15	Y1A
18	PCL2#	17	Y1B
20	LUM1B#	19	Y2
22	TRCLB#	21	CSSELA#
24	PCS1B#	23	CSSELC#
26	PCL1B#	25	CSSELB#
28	A1#	27	B1#
30	/A1#	29	/B1#
32	LUM1A#	31	OPCASSEL#
34	TRCAL#	33	+24V
36	PCS1A#	35	+24V
38	PCL1A#	37	PGND
40	SGND	39	PGND

b. Solder surface

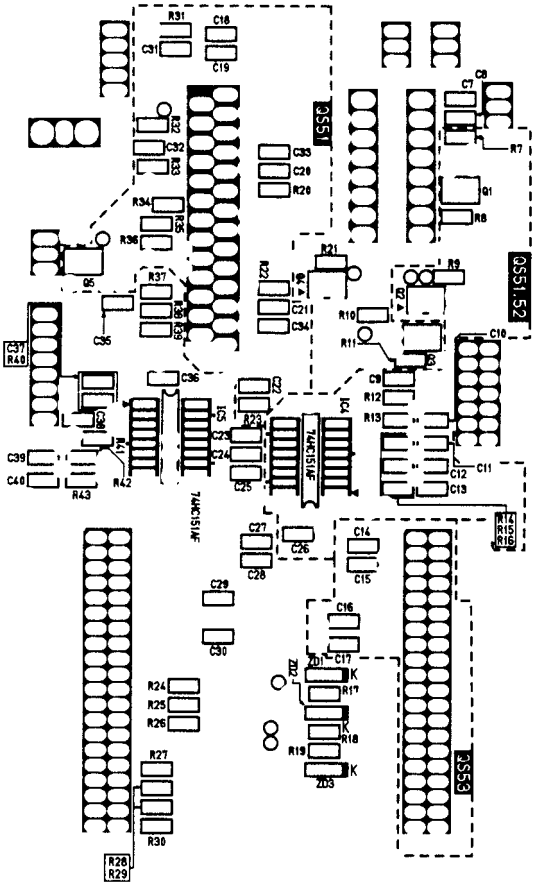

2) Cassette sensor PWB

a. Parts surface

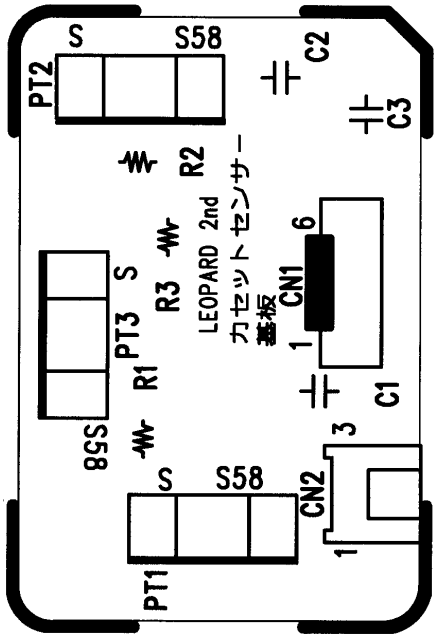

CN1 (S6B-PH-K-S)

6	LUD
5	DRS
4	PAP
3	5V
2	PPD
1	SGND

3	DRS
2	N.C.
1	SGND

b. Solder surface

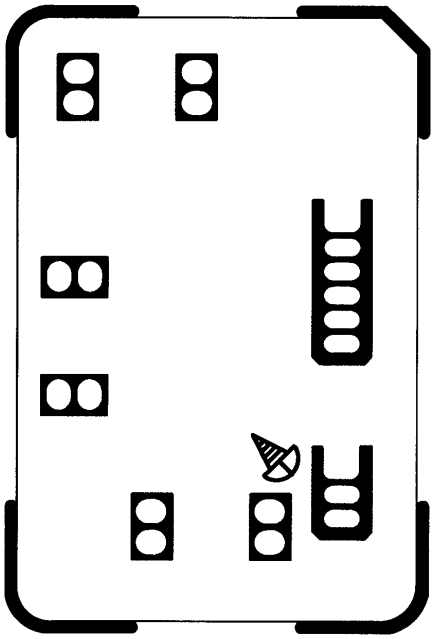

SHARP PARTS GUIDE

CODE:00ZARD22//P1/

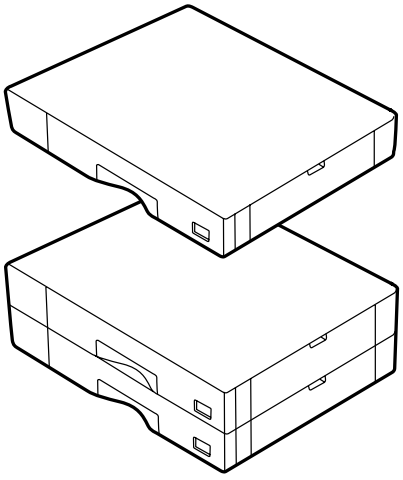

[AR-D21]

[AR-D22]

デジタル複合機
給紙ユニット
DIGITAL COPIER
Paper feed unit

MODEL AR-D21
AR-D22

このパーツガイドに掲載されている表示価格ランクは消費税抜きです。

CONTENTS

1 外装部 (Exteriors)

2 搬送部 (Paper transfer section)

3 給紙部 (Paper feed section)

4 駆動部 (Drive section)

5 ﾘﾌﾄｱｯﾌﾟﾕﾆｯﾄ (Lift up unit)

6 550 枚ｶｾｯﾄ (550 sheets cassette unit)

7 梱包＆付属品 (Packing material & Accessories)

8 ｶｾｯﾄ中継基板 (Cassette interface PWB)

■ 索引 (Index)

本書はサービス活動用に作成した資料です。
一部内容が製品の改良・改善等により予告なしに変わることがあります。

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

補修部品のランク付

市場における補修部品の在庫管理が、適正に運営出来る手助けとなることを、目的とします。

Aランク ： メンテナンスパーツ、メンテナンスパーツには入っていないがメンテナンスパーツに近い消耗パーツ。
Bランク ： 性能・機能パーツ（センサー、クラッチ等の電気パーツ）、消耗パーツ。
Eランク ： 基板含むユニットパーツ。
Dランク ： 整備パーツ（外装、パッキング、同梱パーツ）。
Cランク ： 上記ランク以外のパーツ（基板の子部品を除いたもの）。

DEFINITION

Rank A : Maintenance parts, and consumable parts which are not included in but closely related to maintenance parts
Rank B : Performance/function parts (sensors, clutches, and other electrical parts), consumable parts
Rank E : Unit parts including PWB
Rank D : Preparation parts (External fitting, packing, parts packed together)
Rank C : Parts other than the above (excluding sub components of PWB)

安全性・信頼性確保のため部品は、必ず正規のものをご使用下さい。
⚠ 印の商品は、安全上重要な部品です。交換をする時は、安全及び性能維持のため必ず指定の部品をご使用下さい。

Because parts marked with "⚠" is indispensable for the machine safety maintenance and operation, it must be replaced with the parts specific to the product specification.

○ 当モデルのサービス資料には、この資料以外にサービスマニュアル（回路図含む）があります。合わせてご利用下さい。
○ Other than this Parts Guide, please refer to documents Service Manual (including Circuit Diagram) of this model.
○ Please use the 13 digit code described in the right hand corner of front cover of the document, when you place an order.
○ For U.S. only-Use order codes provided in advertising literature. Do not order from parts department.

1 外装部 (Exteriors)

NO.	PARTS CODE	PRICE RANK Ex.	PRICE RANK Ja.	NEW MARK	PART RANK	DESCRIPTION
1	GCAB-0030QSZA	AN	EG	N	D	Left cabinet 左ｷｬﾋﾞﾈｯﾄ
2	XEBSE40P12000	AA	DD		C	Screw(4×12) ﾋﾞｽ
3	LPLTM0240QSZZ	AC	DJ		C	Joint plate 連結板
5	GCOVA0025QSZB	AS	EQ	N	D	Rear cover 後ｶﾊﾞｰ
7	LFRM-0039QSZB	BK	HG	N	C	Frame ﾌﾚｰﾑ
8	LPLTM0236QSZZ	AG	DX		C	Reinforce plate R 補強板 R
10	PCOVP0063QSZB	AD	DJ	N	C	Front cover 前ｶﾊﾞｰ
12	NSFTZ0048QSZZ	AG	DX		C	Cassette collar shaft ｶｾｯﾄｺﾛ軸
13	NKOM-0005QSZZ	AC	DJ		C	Cassette guide collar ｶｾｯﾄｶﾞｲﾄﾞｺﾛ
14	XBPSD30P08KS0	AA	DD		C	Screw(3×8KS) ﾋﾞｽ
15	GLEGG0064FCZZ	AC	DJ		C	Rubber foot ｺﾞﾑ足
16	LPLTM0237QSZZ	AH	DX		C	Reinforce plate F 補強板 F
17	RHET-0006QSZZ	AQ	EQ		B	Cassette dry heater [Japan only] ｶｾｯﾄ除湿ﾋｰﾀ
18	LPLTP0192QSZZ	AK	DX		C	Dry heater fixing plate [Japan only] ｶｾｯﾄ除湿ﾋｰﾀ取付板
19	XEBSD30P08000	AA	DD		C	Screw(3×8) [Japan only] ﾋﾞｽ
20	DHAi-0393QSZZ	AK	EB	N	C	Dry heater harness [Japan only] 除湿ﾋｰﾀ分岐ﾊｰﾈｽ
22	PSHEZ0325QSZZ	AB	DJ		C	Frame lower mylar ﾌﾚｰﾑ下ﾏｲﾗｰ
23	LX-BZ0037QSZZ	AB	DD		C	Screw(4×12) ﾋﾞｽ
24	PSHEZ0278QSZZ	AE	DJ		C	Heat insulation sheet 多段断熱ｼｰﾄ
25	MSPRD0277QSZZ	AN	EG		C	2nd joint earth spring [Taiwan] 2nd 連結ｱｰｽｽﾌﾟﾘﾝｸﾞ
26	TLABS4306FCZZ	AC	DJ		D	Noise label A [U.S.A,Canada] ﾉｲｽﾞﾗﾍﾞﾙ A

1 外装部 (Exteriors)

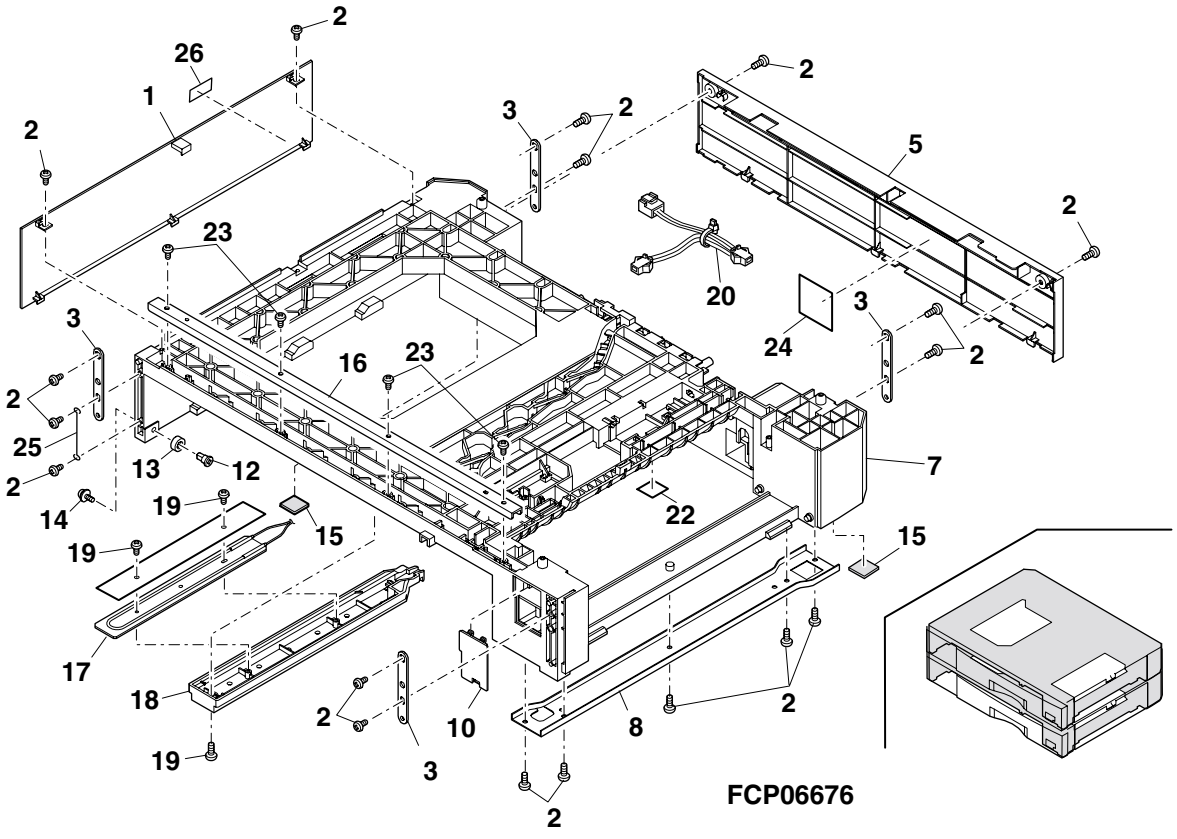

2 搬送部 (Paper transfer section)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
1	MSPRC0141QSZZ	AB	DJ		C	Lock spring	ﾛｯｸｽﾌﾟﾘﾝｸﾞ
2	MLOKZ0001QSZZ	AC	DJ		C	Paper guide lock	ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞﾛｯｸ
3	XEPSD30P08X00	AA	DD		C	Screw(3×8X)	ﾋﾞｽ
4	PGiDM0068QSZZ	AP	EQ		C	Transport paper guide	搬送ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞ
5	MARMP0015QSZZ	AD	DJ		C	Door arm	ﾄﾞｱｱｰﾑ
6	NSFTZ0054QSZZ	AE	DJ		C	Transport paper guide shaft	搬送ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞｼｬﾌﾄ
7	NROLP1060FCZZ	AF	DS		C	U-turn roller	Uﾀｰﾝﾛｰﾗｰ
8	MSPRP0345QSZZ	AD	DJ	N	C	Transport paper guide spring [AR-D21]	搬送ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞｽﾌﾟﾘﾝｸﾞ
	MSPRP0273QSZZ	AD	DJ		C	Transport paper guide spring [AR-D22]	搬送ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞｽﾌﾟﾘﾝｸﾞ
9	XEBSD30P08000	AA	DD		C	Screw(3×8)	ﾋﾞｽ
10	GCOVA0026QSZB	AP	EQ	N	D	Right cover	右ｶﾊﾞｰ
11	XEBSD30P10000	AA	DD		C	Screw(3×10)	ﾋﾞｽ
12	PCOVP0089QSZZ	AD	DJ		C	Plate cover	ﾌﾟﾚｰﾄｶﾊﾞｰ
13	LPLTP0297QSZZ	AC	DJ		C	Separation plate	捌きﾌﾟﾚｰﾄ
14	PSHEZ0378QSZZ	AG	DX		C	Separation sheet	捌きｼｰﾄ
15	NROLR0052QSZZ	AN	EQ		C	Transport roller	搬送ﾛｰﾗｰ
16	MSPRC0270QSZZ	AB	DJ		C	Separation plate spring	捌きﾌﾟﾚｰﾄｽﾌﾟﾘﾝｸﾞ
17	NBRGZ0503FCZZ	AC	DJ		C	Bearing(B-F5-13)	軸受
18	LSTPP0011QSZZ	AC	DJ		C	E-ring	E-ﾘﾝｸﾞ
19	LRALP0009QSZZ	AQ	EQ		C	Cassette rail R	ｶｾｯﾄﾚｰﾙ R
20	XBPSD30P08KS0	AA	DD		C	Screw(3×8KS)	ﾋﾞｽ
21	NKOM-0005QSZZ	AC	DJ		C	Cassette guide collar	ｶｾｯﾄｶﾞｲﾄﾞｺﾛ
22	NSFTZ0048QSZZ	AG	DX		C	Cassette collar shaft	ｶｾｯﾄｺﾛ軸
23	PGiDM0074QSZZ	AK	DX		C	U-turn guide	Uﾀｰﾝｶﾞｲﾄﾞ
24	XEBSE40P12000	AA	DD		C	Screw(4×12)	ﾋﾞｽ
25	MSPRD0259QSZZ	AC	DJ		C	U turn guide spring [AR-D22]	多段 Uﾀｰﾝｶﾞｲﾄﾞｽﾌﾟﾘﾝｸﾞ
26	MSPRD0287QSZZ	AC	DJ		C	Paper feed assistance roller SP	給紙補助ﾛｰﾗｰｽﾌﾟﾘﾝｸﾞ
27	NSFTZ0064QSZZ	AD	DJ		C	Paper feed assistance roller shaft	給紙補助ﾛｰﾗｰ軸
28	NROLP0087QSZZ	AD	DJ		C	Paper feed assistance roller	給紙補助ﾛｰﾗｰ
29	PSHEZ0301QSZZ	AC	DJ		C	Rail R side mylar F	ﾚｰﾙ R ｻｲﾄﾞﾏｲﾗｰ F
30	PSHEZ0302QSZZ	AC	DJ		C	Rail R side mylar R	ﾚｰﾙ R ｻｲﾄﾞﾏｲﾗｰ R
501	CCOVP0089RS51	AQ	EQ		E	Plate cover unit	ﾌﾟﾚｰﾄｶﾊﾞｰﾕﾆｯﾄ
502	CGiDM0068RS51	AS	EQ		E	Transport paper guide unit [AR-D21]	搬送ﾍﾟｰﾊﾟｰｶﾞｲﾄﾞﾕﾆｯﾄ

2 搬送部 (Paper transfer section)

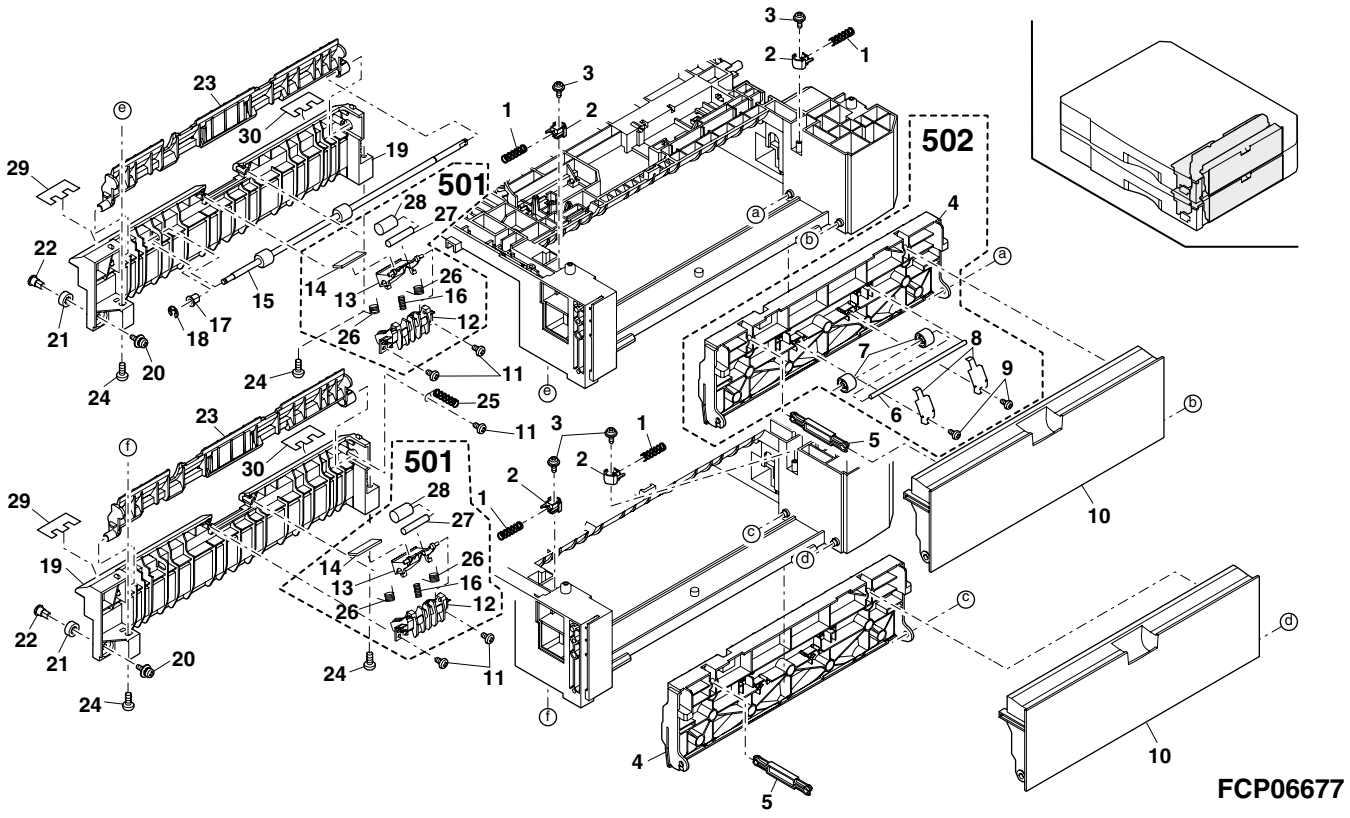

3 給紙部 (Paper feed section)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
1	CPWBF0082QSE3	BE	GN		E	Cassette interface PWB	[AR-D22] 多段ｶｾｯﾄ中継基板
2	PCOVP0070QSZZ	AD	DJ		C	Sensor cover	ｾﾝｻｰｶﾊﾞｰ
3	XEBSD30P10000	AA	DD		C	Screw(3×10)	ﾋﾞｽ
5	MLEVP0063QSZZ	AD	DJ		C	Upper limit detect actuator	上限検知ｱｸﾁｭｴｰﾀｰ
6	MLEVP0064QSZZ	AD	DJ		C	Paper detect actuator	紙検知ｱｸﾁｭｴｰﾀｰ
7	MLEVP0062QSZZ	AC	DJ		C	P-IN detect actuator	入紙検知ｱｸﾁｭｴｰﾀｰ
8	PCOVP0064QSZZ	AD	DJ		C	Solenoid cover	ｿﾚﾉｲﾄﾞｶﾊﾞｰ
9	RPLU-0026QSZ1	AR	EQ		B	Paper feed solenoid	給紙ｿﾚﾉｲﾄﾞ
10	MARMP0026QSZZ	AD	DJ		C	Solenoid arm	ｿﾚﾉｲﾄﾞｱｰﾑ
11	MSPRC0209QSZ1	AC	DJ		C	Solenoid spring	ｿﾚﾉｲﾄﾞｽﾌﾟﾘﾝｸﾞ
13	NSFTZ0050QSZ1	AH	DX		C	Paper feed roller shaft	給紙ﾛｰﾗ軸
14	QSW-B0017QSZZ	AF	DS		B	Cassette detect switch	ｶｾｯﾄ検知ｽｲｯﾁ
17	DHAi-0397QSZZ	AD	DJ	N	C	Cassette detect interface harness	ｶｾｯﾄ検知中継ﾊｰﾈｽ
18	NBRGC0100FCZ1	AC	DJ		C	Bearing 6	ﾍﾞｱﾘﾝｸﾞ 6
19	MSPRD0206QSZZ	AC	DJ		C	Pick up roller pressure spring	ﾋﾟｯｸｱｯﾌﾟﾛｰﾗｰ加圧ｽﾌﾟﾘﾝｸﾞ
20	MARMP0021QSZZ	AD	DJ		C	Pick up arm R	ﾋﾟｯｸｱｯﾌﾟｱｰﾑ R
21	NGERH0107QSZZ	AD	DJ		C	Paper feed gear	給紙ｷﾞﾔ
22	LPiN-0026MCZZ	AA	DD		C	Spring pin(φ2-10)	ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ
23	NROLR0055QSZ1	AR	EQ		C	Paper feed roller	給紙ﾛｰﾗｰ
24	MARMP0019QSZZ	AD	DJ		C	Pick up arm F	ﾋﾟｯｸｱｯﾌﾟｱｰﾑ F
25	LSTPP0011QSZZ	AC	DJ		C	E-ring	E-ﾘﾝｸﾞ
26	NGERH0990FCZZ	AB	DJ		C	Gear(16T)	ｷﾞﾔ
27	NROLR0054QSZZ	AP	EQ		C	Pick up roller	ﾋﾟｯｸｱｯﾌﾟﾛｰﾗｰ
29	DHAi-0394QSZZ	AD	DJ	N	C	Door open/close detect harness	ﾄﾞｱ開閉検知ﾊｰﾈｽ
30	MSPRD0204QSZZ	AC	DJ		C	P-IN detect actuator spring	入紙検知ｱｸﾁｭｴｰﾀｰｽﾌﾟﾘﾝｸﾞ
31	DHAi-0395QSZZ	AG	DX	N	C	Cassette sensor PWB harness	ｶｾｯﾄｾﾝｻｰ基板ﾊｰﾈｽ

3 給紙部 (Paper feed section)

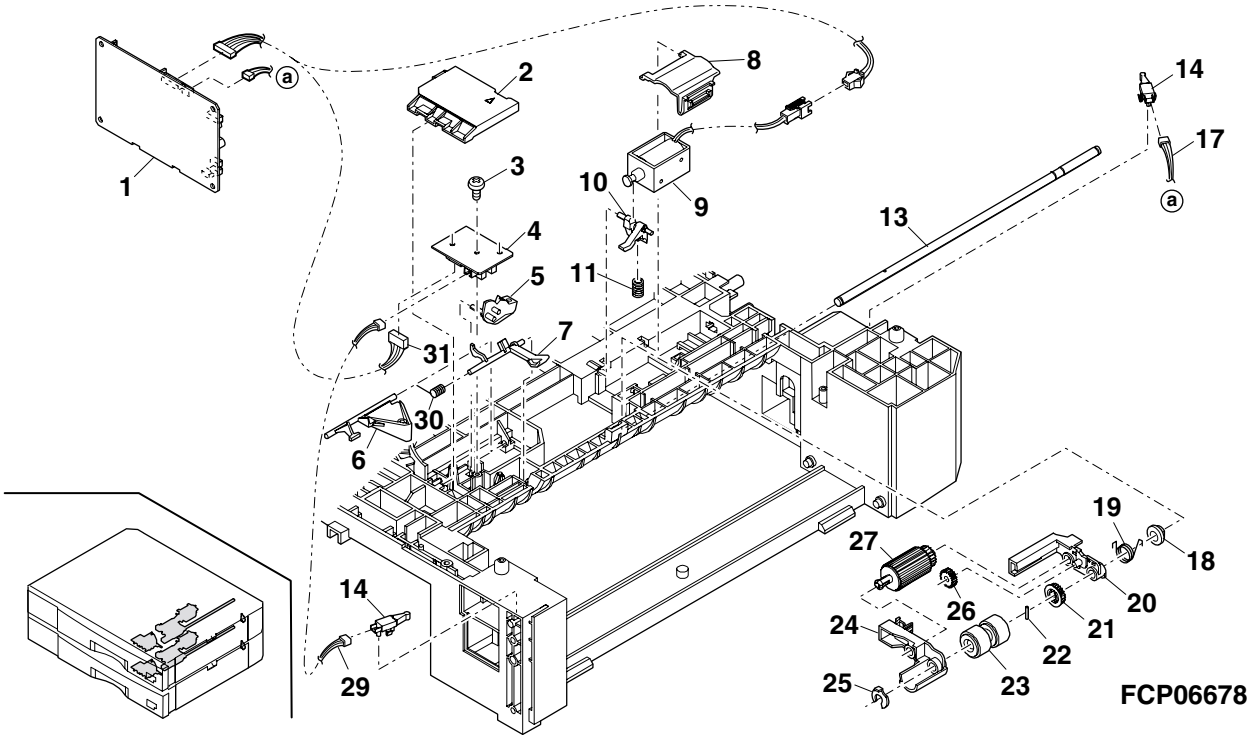

4 駆動部 (Drive section)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
1	PCOVP0084QSZZ	AE	DJ		C	Bottom cover	底ｶﾊﾞｰ
2	CPWBF0082QSE3	BE	GN		E	Cassette interface PWB [AR-D22]	多段ｶｾｯﾄ中継基板
3	XEBSD30P08000	AA	DD		C	Screw(3×8)	ﾋﾞｽ
4	DHAi-0392QSZZ	AU	EZ	N	C	Cassette harness	2ND/ﾀﾀﾞﾝﾊｰﾈｽ
5	NBRGC0100FCZ1	AC	DJ		C	Bearing 6	ﾍﾞｱﾘﾝｸﾞ 6
6	MARMP0018QSZZ	AD	DJ		C	Body joint arm [AR-D22]	本体連結ｱｰﾑ
7	PCLC-0014QSZZ	AS	EQ		B	Paper feed clutch(42T)	給紙ｸﾗｯﾁ
8	XRESP40-06000	AA	DD		C	E type ring	E-ﾘﾝｸﾞ
9	XRESP50-06000	AA	DD		C	E type ring	E-ﾘﾝｸﾞ
10	MSPRT0203QSZZ	AC	DJ		C	Joint spring [AR-D22]	連結ｽﾌﾟﾘﾝｸﾞ
11	NGERH0119QSZZ	AD	DJ		C	Gear(36T) [AR-D22]	ｷﾞﾔ
12	NGERH1207FCZZ	AF	DS		C	Joint gear(40T)	連結ｷﾞﾔ
13	CDAiU0024RS52	BA	FX		E	Lift up unit	ﾘﾌﾄｱｯﾌﾟﾕﾆｯﾄ
14	XEBSD40P30000	AA	DD		C	Screw(4×30)	ﾋﾞｽ
15	XEBSE40P12000	AA	DD		C	Screw(4×12)	ﾋﾞｽ
16	NGERH1207FCZZ	AF	DS		C	Joint gear(40T) [AR-D22]	連結ｷﾞﾔ
17	DHAi-0396QSZZ	AD	DJ	N	C	Lift up harness	ﾘﾌﾄｱｯﾌﾟﾊｰﾈｽ
20	LPLTM0203QSZ1	AF	DS		C	Drive plate	多段駆動ﾌﾟﾚｰﾄ
24	NGERH0121QSZZ	AE	DJ		C	Gear(20T/45T/26P)	ｷﾞﾔ
25	NBLTT0029QSZZ	AG	DX		B	Vertical delivery belt	縦搬送ﾍﾞﾙﾄ
26	PCLC-0011QSZZ	AS	EQ		B	Transport clutch	搬送ｸﾗｯﾁ
28	NPLYZ0027QSZZ	AD	DJ		C	Vertical transport pulley	縦搬送ﾌﾟｰﾘｰ
29	PSHEZ0250QSZZ	AB	DJ		C	Flange mylar	ﾌﾗﾝｼﾞﾏｲﾗｰ
30	NROLP0008QSZZ	AD	DJ		C	Pulley	ﾌﾟｰﾘｰ
31	PSHEZ0249QSZZ	AB	DJ		C	Flange mylar	ﾌﾗﾝｼﾞﾏｲﾗｰ
32	NBRGC0529FCZZ	AD	DJ		C	Bearing	軸受
33	LPLTM0176QSZZ	AH	DX		C	Clutch earth plate	ｸﾗｯﾁｱｰｽ板
34	CFRM-0053QS02	AK	DX		C	Motor frame	ﾓｰﾀ - ﾌﾚｰﾑ
35	NBLTT0025QSZZ	AG	DX		C	Drive belt	多段駆動ﾍﾞﾙﾄ
36	NGERH0154QSZZ	AD	DJ		C	Gear(21T/28P)	ｷﾞﾔ
37	NGERH1207FCZZ	AF	DS		C	Gear(40T)	ｷﾞﾔ
38	RMOTS0030QSZZ	BA	FX		B	Drive motor	駆動ﾓｰﾀ -
39	XHBSE30P08000	AA	DD		C	Screw(3×8)	ﾋﾞｽ
40	DHAi-0401QSZZ	AC	DJ	N	C	Cassette earth harness	ｶｾｯﾄｱｰｽﾊｰﾈｽ
41	DHAi-0402QSZZ	AL	EB	N	C	Cassette harness [AR-D22]	4 段目ｶｾｯﾄﾊｰﾈｽ
42	XHBSE30P08000	AA	DD		C	Screw(3×8)	ﾋﾞｽ
43	CARMM0040QS02	AL	EB		C	Joint arm	多段連結ｱｰﾑ
44	PCLC-0015QSZZ	AS	EQ		B	Transport clutch [AR-D22]	搬送ｸﾗｯﾁ
45	NGERH0022QSZZ	AC	DJ		C	Gear(33T)	ｷﾞﾔ
46	RCORF1036ACZZ	AP	EQ		C	Core	ｺｱ
47	LX-BZ0322FCZZ	AB	DD		C	Screw	ﾋﾞｽ
48	XWHSD50-08120	AA	DD		C	Washer	ﾜｯｼｬ
49	LHLDZ0091QSZZ	AD	DJ		C	Joint holder	多段連結ﾎﾙﾀﾞｰ
50	LX-WZ5022BCZZ	AA	DD		C	Washer	ﾜｯｼｬ
51	PSHEZ0276QSZZ	AB	DJ		C	Oscillating prevention sheet A	多段防振ｼｰﾄ A
52	PSHEZ0277QSZZ	AA	DJ		C	Oscillating prevention sheet B	多段防振ｼｰﾄ B
53	LX-BZ0342FCZZ	AB	DD		C	Power supply SW stage screw	電源 SW 段ﾋﾞｽ
501	CFRM-0053RS51	BC	GJ		E	Motor frame unit	ﾓｰﾀｰﾌﾚｰﾑﾕﾆｯﾄ

5 ﾘﾌﾄｱｯﾌﾟﾕﾆｯﾄ (Lift up unit)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
1	CMOTV0778FCE2	AW	FG		E	Lift up motor unit	ﾘﾌﾄｱｯﾌﾟﾓｰﾀｰﾕﾆｯﾄ
2	NGERH0158QSZ1	AE	DJ		C	Gear(29T/11T)	ｷﾞﾔ
3	LDAiU0024QSZ1	AH	DX		C	Lift up base	ﾘﾌﾄｱｯﾌﾟﾍﾞｰｽ
4	NGERH0102QSZZ	AD	DJ		C	Gear(53T/14T)	ｷﾞﾔ
5	NSFTZ0045QSZZ	AC	DJ		C	Shaft	ｼｬﾌﾄ
6	NGERH0103QSZZ	AE	DJ		C	Gear(54T/13T)	ｷﾞﾔ
7	NSFTZ0044QSZZ	AC	DJ		C	Shaft	ｼｬﾌﾄ
8	NSFTZ0060QSZZ	AC	DJ		C	Shaft	ｼｬﾌﾄ
9	NGERH0104QSZZ	AE	DJ		C	Gear(13T/42T)	ｷﾞﾔ
10	NGERH0105QSZZ	AD	DJ		C	Gear(19T)	ｷﾞﾔ
11	PCOVP0061QSZ1	AH	DX	N	C	Lift up cover	ﾘﾌﾄｱｯﾌﾟｶﾊﾞｰ
12	MSPRD0251QSZZ	AD	DJ		C	Cassette earth spring	ｶｾｯﾄｱｰｽｽﾌﾟﾘﾝｸﾞ
13	MSPRC0263QSZZ	AC	DJ		C	Lift up spring	ﾘﾌﾄｱｯﾌﾟｽﾌﾟﾘﾝｸﾞ
	(Unit)						
901	CDAiU0024RS52	BA	FX		E	Lift up unit	ﾘﾌﾄｱｯﾌﾟﾕﾆｯﾄ

4 駆動部 (Drive section)

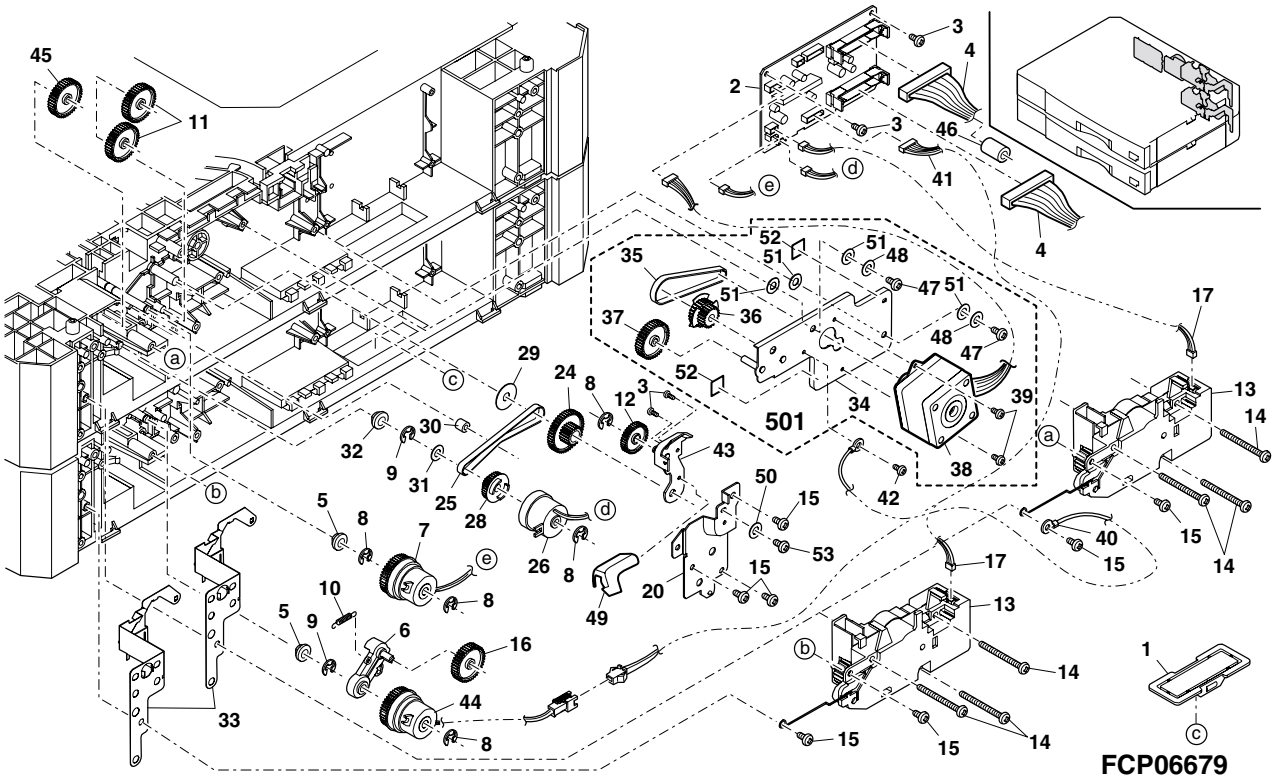

5 ﾘﾌﾄｱｯﾌﾟﾕﾆｯﾄ (Lift up unit)

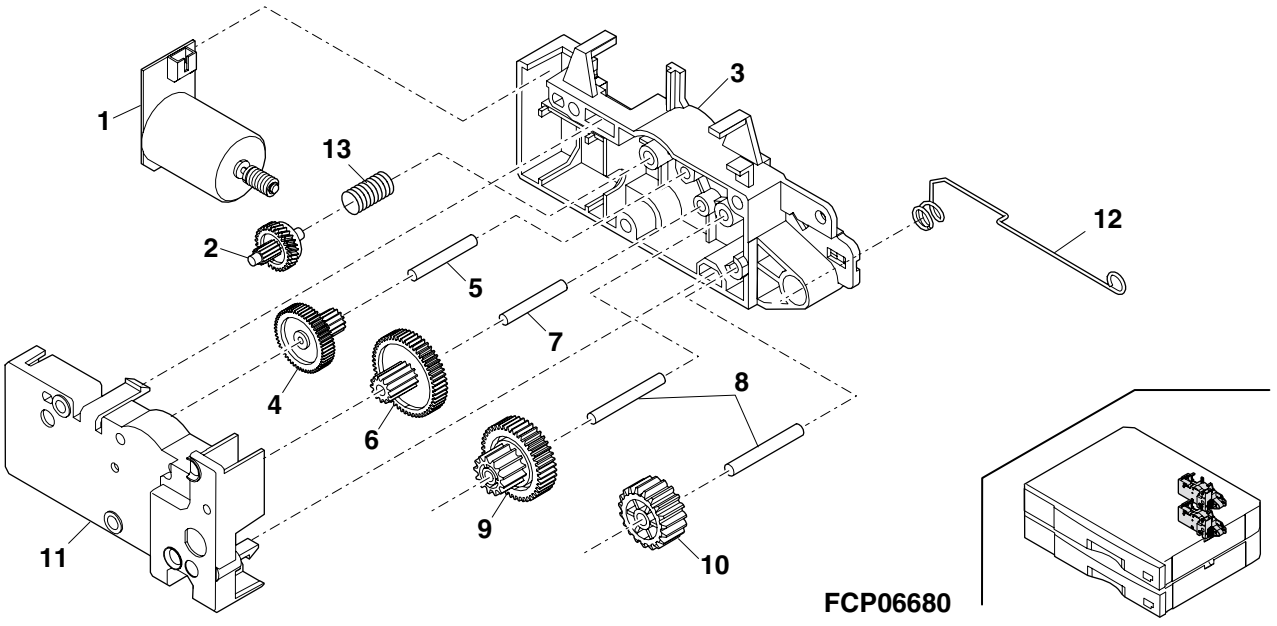

6 550 枚ｶｾｯﾄ (550 sheets cassette unit)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
1	LPLTP0159QSZZ	AD	DJ		C	Cassette rear side plate	ｶｾｯﾄ後端板
2	LHLDW1226FCZZ	AB	DJ		C	Turn fastener	ﾀｰﾝﾌｧｽﾅｰ
3	LPLTM0179QSZ1	AR	EQ		C	Rotation plate	回転板
4	PSHEZ0274QSZZ	AC	DJ		C	Rotation plate sheet	回転板ｼｰﾄ
5	GCASP0005QSZ2	BA	FX	N	D	550 sheets cassette	550 枚ｶｾｯﾄ
6	PGiDM0070QSZ1	AM	EG		C	Guide F	ｶﾞｲﾄﾞ F
7	PTPE-0021QSZZ	AD	DJ		C	GID tape	GID 両面ﾃｰﾌﾟ
8	LPLTM0181QSZ1	AB	DJ		C	Side plate guide	側板ｶﾞｲﾄﾞ
9	PGiDM0071QSZZ	AL	EB		C	Guide R	ｶﾞｲﾄﾞ R
10	LX-BZ0884FCZZ	AB	DD		C	Screw	ﾋﾞｽ
11	NGERH0193FCZZ	AB	DD		C	UC manual feed gear	UC 手差しｷﾞﾔ
12	MSPRC2631FCZZ	AC	DJ		C	Fusing pressure spring	定着加圧ｽﾌﾟﾘﾝｸﾞ
13	MLEVP0755FCZ1	AE	DJ		C	Side plate F lever	側板 F ﾚﾊﾞｰ
14	LX-BZ0833FCZZ	AC	DD		C	Screw	ﾋﾞｽ
15	CSHEZ0244QS02	AE	DJ		C	Cassette mylar	ｶｾｯﾄﾏｲﾗｰ
16	XRESP70-08000	AA	DD		C	E type ring	E- ﾘﾝｸﾞ
17	NGERH0108QSZZ	AD	DJ		C	Lift gear(22T)	ﾘﾌﾄｷﾞﾔ
18	MSPRC0210QSZZ	AC	DJ		C	Lift gear spring	ﾘﾌﾄｷﾞﾔｽﾌﾟﾘﾝｸﾞ
19	NSFTZ0047QSZZ	AP	EQ		C	Lift shaft	ﾘﾌﾄｼｬﾌﾄ
20	LPLTM0180QSZ1	AE	DS		C	Lift plate	ﾘﾌﾄﾌﾟﾚｰﾄ
21	NBRGP0041GCZZ	AD	DJ		C	Bearing	軸受
22	XEBSE40P10000	AA	DD		C	Screw(4×10)	ﾋﾞｽ
23	JHNDP0005QSZZ	AY	FQ	N	D	Cassette panel	ｶｾｯﾄﾊﾟﾈﾙ
24	XBPSD40P08KS0	AA	DD		C	Screw(4×8KS)	ﾋﾞｽ
26	PCOVP0096QSZZ	AN	EQ	N	D	Cassette panel line	ｶｾｯﾄﾊﾟﾈﾙﾗｲﾝ
27	LPLTM0277QSZZ	AC	DJ		C	Side plate guide R	側板ｶﾞｲﾄﾞ R
	(Unit)						
901	CCASP0005RS55	BM	HR	N	E	550 sheets cassette unit	550 枚ｶｾｯﾄﾕﾆｯﾄ

6 550 枚ｶｾｯﾄ (550 sheets cassette unit)

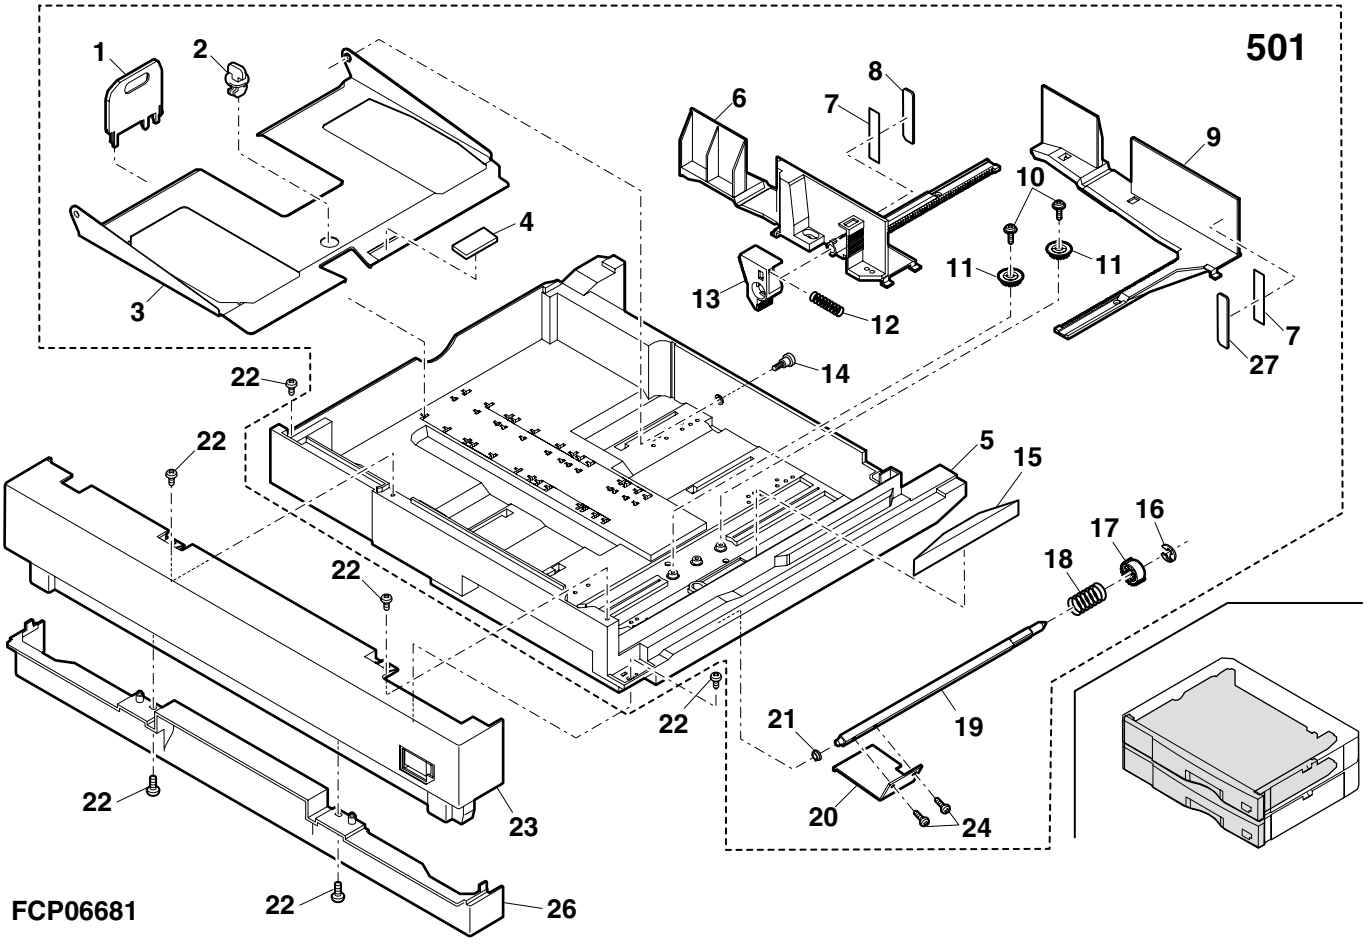

7 梱包&付属品 (Packing material & Accessories)

NO.	PARTS CODE	PRICE RANK		NEW MARK	PART RANK	DESCRIPTION	
		Ex.	Ja.				
3	SSAKH3012KCZZ	AD	DJ		D	Vinyl bag	[AR-D21] ﾎﾟﾘ袋
	SSAKH2002WCZZ	AE	DJ		D	Vinyl bag	[AR-D22] ﾎﾟﾘ袋
6	SPAKA0392QSZZ	AD	DJ		D	Packing add	保護材 C
7	LHLDW1226FCZZ	AB	DJ		C	Turn fastener	ﾀｰﾝﾌｧｽﾅｰ
8	TCADZ1275FCZZ	AB	DJ		D	Caution card	注意ｶｰﾄﾞ
9	TCADZ0288QSZZ	AD	DJ	N	D	Inst manual	[Other Countries] 設置手順書
10	SSAKA0231QCZZ	AA	DD		D	Vinyl bag	ﾎﾟﾘ袋
11	TLABH0486QSZZ	AE	DS	N	D	Size display label	[Japan only] ｻｲｽﾞ表示ﾗﾍﾞﾙ
	TLABH0484QSZZ	AE	DS	N	D	Size display label	[Inch series] ｻｲｽﾞ表示ﾗﾍﾞﾙ

7 梱包&付属品 (Packing material & Accessories)

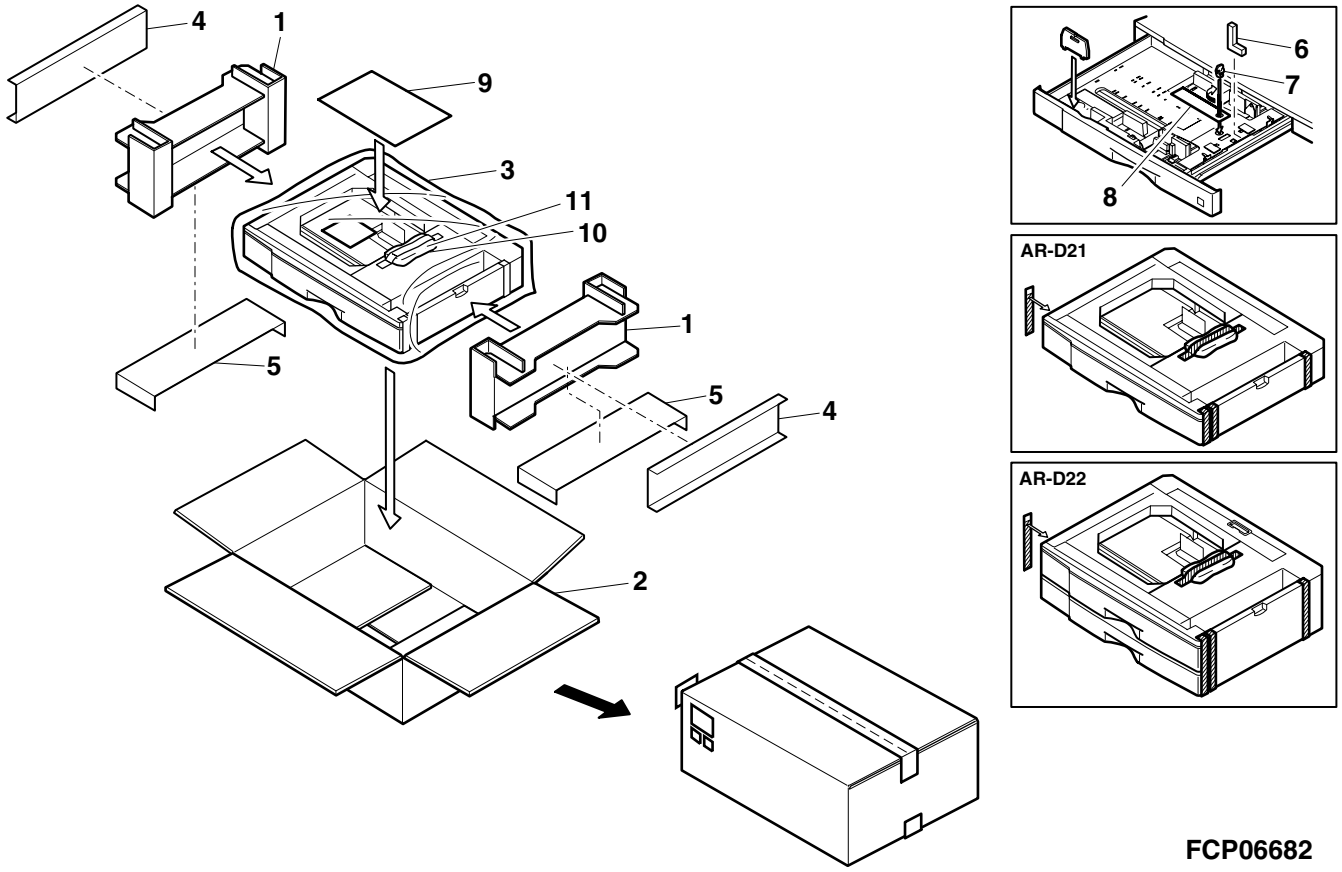

FCP06682

8 ｶｾｯﾄ中継基板 (Cassette interface PWB)

NO.	PARTS CODE	PRICE RANK Ex.	PRICE RANK Ja.	NEW MARK	PART RANK	DESCRIPTION
1	QCNCM0068QSZZ	AL	EB		C	Connector(40pin) [AR-D21][CN5] ｺﾈｸﾀｰ
2	QCNCM0071QSZZ	AL	EB		C	Connector(40pin) [CN9] ｺﾈｸﾀｰ
3	QCNCM0923FC14	AE	DJ		C	Connector(14pin) [AR-D22][CN4] ｺﾈｸﾀｰ
4	QCNCM2401SC0C	AB	DJ		C	Connector(3pin) [CN1] ｺﾈｸﾀｰ
5	QCNCM7014SC0C	AA	DD		C	Connector(3pin) [CN3] ｺﾈｸﾀｰ
6	QCNCM7014SC0E	AB	DJ		C	Connector(5pin) [CN6] ｺﾈｸﾀｰ
7	QCNCM7014SC0H	AB	DD		C	Connector(8pin) [CN8] ｺﾈｸﾀｰ
8	QCNCP0340QCZZ	AC	DJ		C	Connector(3pin) [CN2] ｺﾈｸﾀｰ
9	QCNCP0341QCZZ	AC	DJ		C	Connector(3pin) [CN7] ｺﾈｸﾀｰ
10	VCEAGA1VW106M	AA	DD		C	Capacitor(35WV 10μF) [C6] ｺﾝﾃﾞﾝｻｰ
11	VCEAGU1CW106M	AA	DD		C	Capacitor(16WV 10μF) [C3,4,5] ｺﾝﾃﾞﾝｻｰ
12	VCEAZA1VW476M	AC	DD		C	Capacitor(35WV 47μF) [C1,2] ｺﾝﾃﾞﾝｻｰ
13	VCKYCY1EF104Z	AA	DD		C	Capacitor(16WV 0.1μF) [C16,17,29,30,32,33,34,36] ｺﾝﾃﾞﾝｻｰ
	VCKYCY1EF104Z	AA	DD		C	Capacitor(16WV 0.1μF) [AR-D22][C26] ｺﾝﾃﾞﾝｻｰ
14	VCKYCY1HB102K	AA	DD		C	Capacitor(50WV 1000pF) [C23,24,25] ｺﾝﾃﾞﾝｻｰ
15	VCKYCY1HB222K	AA	DD		C	Capacitor(50WV 2200pF) [AR-D22][C9~13] ｺﾝﾃﾞﾝｻｰ
	VCKYCY1HB222K	AA	DD		C	Capacitor(50WV 2200pF) [C22,31,35,37~40] ｺﾝﾃﾞﾝｻｰ
16	VCKYCY1HB332K	AA	DD		C	Capacitor(50WV 3300pF) [C20,21] ｺﾝﾃﾞﾝｻｰ
17	VCKYCY1HF473Z	AA	DD		C	Capacitor(50WV 0.047μF) [C7,8,18,19,27,28] ｺﾝﾃﾞﾝｻｰ
	VCKYCY1HF473Z	AA	DD		C	Capacitor(50WV 0.047μF) [AR-D21][C14,15] ｺﾝﾃﾞﾝｻｰ
18	VHEUDZ3．9B／－1	AC	DJ		B	Zener diode(3.89-4.16)(UDZ3.9B) [DZ1,2,3] ﾂｪﾅｰﾀﾞｲｵｰﾄﾞ
19	VHi74HC151M－1	AD	DJ		B	IC(74HC151M) [IC5] IC
	VHi74HC151M－1	AD	DJ		B	IC(74HC151M) [AR-D22][IC4] IC
20	VHiKA78S05P－1	AE	DJ		B	IC(KA78S05P) [IC3] IC
21	VHiMTD13611－1	AR	EQ		B	IC(MTD13611) [IC2] IC
22	VHiT62001AP－1	AH	DX		B	IC(T62001AP) [IC1] IC
23	VHViCPN38／／－1	AF	DS		B	IC protector(ICPN38) [F2,3] IC ﾌﾟﾛﾃｸﾀｰ
	VHViCPN38／／－1	AF	DS		B	IC protector(ICPN38) [AR-D22][F1] IC ﾌﾟﾛﾃｸﾀｰ
24	VHViCPN50／／－1	AE	DJ		B	IC protector(ICP-N50) [F4] IC ﾌﾟﾛﾃｸﾀｰ
25	VRD－HT2EY362J	AA	DD		C	Resistor(1/4W 3.6KΩ ±5%) [R5,6] 抵抗
26	VRD－HT2HY152J	AA	DD		C	Resistor(1/2W 1.5KΩ ±5%) [R2] 抵抗
	VRD－HT2HY152J	AA	DD		C	Resistor(1/2W 1.5KΩ ±5%) [AR-D22][R1] 抵抗
27	VRS－CY1JD102J	AA	DD		C	Resistor(1/16W 1.0KΩ ±5%) [R17,18,19,20,22] 抵抗
28	VRS－CY1JD103J	AA	DD		C	Resistor(1/16W 10KΩ ±5%) [R11,37~43] 抵抗
	VRS－CY1JD103J	AA	DD		C	Resistor(1/16W 10KΩ ±5%) [AR-D22][R7,12~16] 抵抗
29	VRS－CY1JD152F	AA	DD		C	Resistor(1/16W 1.5KΩ ±1%) [R32] 抵抗
30	VRS－CY1JD152J	AA	DD		C	Resistor(1/16W 1.5KΩ ±5%) [R10,24~30] 抵抗
	VRS－CY1JD152J	AA	DD		C	Resistor(1/16W 1.5KΩ ±5%) [AR-D22][R8] 抵抗
31	VRS－CY1JD242J	AA	DD		C	Resistor(1/16W 2.4KΩ ±5%) [R33,36] 抵抗
32	VRS－CY1JD470J	AA	DD		C	Resistor(1/16W 47Ω ±5%) [R21] 抵抗
	VRS－CY1JD470J	AA	DD		C	Resistor(1/16W 47Ω ±5%) [AR-D22][R9] 抵抗
33	VRS－CY1JD471F	AB	DD		C	Resistor(1/16W 470Ω ±1%) [R34] 抵抗
34	VRS－CY1JD622F	AA	DD		C	Resistor(1/16W 6.2KΩ ±1%) [R35] 抵抗
35	VRS－CY1JD752J	AA	DD		C	Resistor(1/16W 7.5KΩ ±5%) [R23,31] 抵抗
36	VRS－RE3AA1R5J	AB	DD		C	Resistor(1W 1.5Ω ±5%) [R3,4] 抵抗
37	VSDTC114EKA－1	AC	DJ		B	Transistor(DTC114EKA) [Q3] ﾄﾗﾝｼﾞｽﾀｰ
	VSDTC114EKA－1	AC	DJ		B	Transistor(DTC114EKA) [AR-D22][Q1] ﾄﾗﾝｼﾞｽﾀｰ
38	VSDTC143ZKA－1	AC	DJ		B	Transistor(DTC143ZKA) [Q5] ﾄﾗﾝｼﾞｽﾀｰ
39	VSiMZ4＋＋＋＋＋－1	AD	DJ		B	Transistor(IMZ4) [Q4] ﾄﾗﾝｼﾞｽﾀｰ
	VSiMZ4＋＋＋＋＋－1	AD	DJ		B	Transistor(IMZ4) [AR-D22][Q2] ﾄﾗﾝｼﾞｽﾀｰ
	(Unit)					
901	CPWBF0082QSE3	BE	GN		E	Cassette interface PWB [AR-D22] 多段ｶｾｯﾄ中継基板

■ 索引 (Index)

PARTS CODE	JAPAN ONLY ORDER CODE	NO.	PRICE R. Ex.	PRICE R. Ja.	NEW	P/R
【C】						
CARMM0040QS02	578 240 0102	4- 43	AL	EB		C
CCASP0005RS55	578 108 0139	6- 901	BM	HR	N	E
CCOVP0089RS51	578 110 0214	2- 501	AQ	EQ		E
CDAiU0024RS52	578 210 0095	4- 13	BA	FX		E
〃	578 210 0095	5- 901	BA	FX		E
CFRM-0053QS02	578 213 0362	4- 34	AK	DX		C
CFRM-0053RS51	578 213 0399	4- 501	BC	GJ		E
CGiDM0068RS51	578 345 0409	2- 502	AS	EQ		E
CMOTV0778FCE2	578 630 0126	5- 1	AW	FG		E
CPWBF0082QSE3	578 684 0941	3- 1	BE	GN		E
〃	578 684 0941	4- 2	BE	GN		E
〃	578 684 0941	8- 901	BE	GN		E
CSHEZ0244QS02	578 403 0707	6- 15	AE	DJ		C
【D】						
DHAi-0392QSZZ	578 542 0378	4- 4	AU	EZ	N	C
DHAi-0393QSZZ	578 542 0379	1- 20	AK	EB	N	C
DHAi-0394QSZZ	578 542 0380	3- 29	AD	DJ	N	C
DHAi-0395QSZZ	578 542 0381	3- 31	AG	DX	N	C
DHAi-0396QSZZ	578 542 0382	4- 17	AD	DJ	N	C
DHAi-0397QSZZ	578 542 0383	3- 17	AD	DJ	N	C
DHAi-0401QSZZ	572 542 2451	4- 40	AC	DJ	N	C
DHAi-0402QSZZ	572 542 2452	4- 41	AL	EB	N	C
【G】						
GCAB-0030QSZA	578 107 0582	1- 1	AN	EG	N	D
GCASP0005QSZ2	578 108 0137	6- 5	BA	FX	N	D
GCOVA0025QSZB	578 110 0269	1- 5	AS	EQ	N	D
GCOVA0026QSZB	578 110 0270	2- 10	AP	EQ	N	D
GLEGG0064FCZZ	572 123 0072	1- 15	AC	DJ		C
【J】						
JHNDP0005QSZZ	578 172 0020	6- 23	AY	FQ	N	D
【L】						
LDAiU0024QSZ1	578 210 0090	5- 3	AH	DX		C
LFRM-0039QSZB	572 213 2278	1- 7	BK	HG	N	C
LHLDW1226FCZZ	572 214 1450	6- 2	AB	DJ		C
〃	572 214 1450	7- 7	AB	DJ		C
LHLDZ0091QSZZ	578 214 0256	4- 49	AD	DJ		C
LPiN-0026MCZZ	589 218 0012	3- 22	AA	DD		C
LPLTM0176QSZZ	578 221 0607	4- 33	AH	DX		C
LPLTM0179QSZ1	578 221 0719	6- 3	AR	EQ		C
LPLTM0180QSZ1	578 221 0711	6- 20	AE	DS		C
LPLTM0181QSZ1	578 221 0717	6- 8	AB	DJ		C
LPLTM0203QSZ1	578 221 0730	4- 20	AF	DS		C
LPLTM0236QSZZ	578 221 0624	1- 8	AG	DX		C
LPLTM0237QSZZ	578 221 0625	1- 16	AH	DX		C
LPLTM0240QSZZ	578 221 0626	1- 3	AC	DJ		C
LPLTM0277QSZZ	578 221 0718	6- 27	AC	DJ		C
LPLTP0159QSZZ	578 221 0654	6- 1	AD	DJ		C
LPLTP0192QSZZ	578 221 0638	1- 18	AK	DX		C
LPLTP0297QSZZ	578 221 0738	2- 13	AC	DJ		C
LRALP0009QSZZ	578 223 0018	2- 19	AQ	EQ		C
LSTPP0011QSZZ	578 230 0043	2- 18	AC	DJ		C
〃	578 230 0043	3- 25	AC	DJ		C
LX-BZ0037QSZZ	578 970 0236	1- 23	AB	DD		C
LX-BZ0322FCZZ	572 970 0195	4- 47	AB	DD		C
LX-BZ0342FCZZ	572 970 0256	4- 53	AB	DD		C
LX-BZ0833FCZZ	572 970 1816	6- 14	AC	DD		C
LX-BZ0884FCZZ	572 970 1964	6- 10	AB	DD		C
LX-WZ5022BCZZ	578 990 0014	4- 50	AA	DD		C
【M】						
MARMP0015QSZZ	572 240 0341	2- 5	AD	DJ		C
MARMP0018QSZZ	578 240 0076	4- 6	AD	DJ		C
MARMP0019QSZZ	578 240 0077	3- 24	AD	DJ		C
MARMP0021QSZZ	578 240 0078	3- 20	AD	DJ		C
MARMP0026QSZZ	578 240 0087	3- 10	AD	DJ		C
MLEVP0062QSZZ	578 248 0221	3- 7	AC	DJ		C
MLEVP0063QSZZ	578 248 0222	3- 5	AD	DJ		C
MLEVP0064QSZZ	578 248 0223	3- 6	AD	DJ		C
MLEVP0755FCZ1	572 248 1206	6- 13	AE	DJ		C
MLOKZ0001QSZZ	572 252 0020	2- 2	AC	DJ		C
MSPRC0141QSZZ	572 258 3248	2- 1	AB	DJ		C
MSPRC0209QSZ1	578 258 0730	3- 11	AC	DJ		C
MSPRC0210QSZZ	578 258 0621	6- 18	AC	DJ		C
MSPRC0263QSZZ	578 258 0713	5- 13	AC	DJ		C
MSPRC0270QSZZ	578 258 0720	2- 16	AB	DJ		C
MSPRC2631FCZZ	572 258 2943	6- 12	AC	DJ		C
MSPRD0204QSZZ	578 258 0646	3- 30	AC	DJ		C
MSPRD0206QSZZ	578 258 0648	3- 19	AC	DJ		C
MSPRD0251QSZZ	578 258 0660	5- 12	AD	DJ		C
MSPRD0259QSZZ	578 258 0697	2- 25	AC	DJ		C
MSPRD0277QSZZ	578 258 0735	1- 25	AN	EG		C
MSPRD0287QSZZ	578 258 0759	2- 26	AC	DJ		C
MSPRP0273QSZZ	578 258 0739	2- 8	AD	DJ		C
MSPRP0345QSZZ	578 258 0827	2- 8	AD	DJ	N	C
MSPRT0203QSZZ	578 258 0681	4- 10	AC	DJ		C
【N】						
NBLTT0025QSZZ	578 271 0061	4- 35	AG	DX		C
NBLTT0029QSZZ	578 271 0065	4- 25	AG	DX		B
NBRGC0100FCZ1	572 272 0465	3- 18	AC	DJ		C
〃	572 272 0465	4- 5	AC	DJ		C
NBRGC0529FCZZ	572 272 0498	4- 32	AD	DJ		C
NBRGP0041GCZZ	578 272 0061	6- 21	AD	DJ		C
NBRGZ0503FCZZ	572 272 0463	2- 17	AC	DJ		C
NGERH0022QSZZ	572 281 1763	4- 45	AC	DJ		C
NGERH0102QSZZ	578 281 0324	5- 4	AD	DJ		C
NGERH0103QSZZ	578 281 0325	5- 6	AE	DJ		C
NGERH0104QSZZ	578 281 0326	5- 9	AE	DJ		C
NGERH0105QSZZ	578 281 0327	5- 10	AD	DJ		C
NGERH0107QSZZ	578 281 0329	3- 21	AD	DJ		C
NGERH0108QSZZ	578 281 0330	6- 17	AD	DJ		C
NGERH0119QSZZ	578 281 0338	4- 11	AD	DJ		C
NGERH0121QSZZ	578 281 0339	4- 24	AE	DJ		C
NGERH0154QSZZ	578 281 0356	4- 36	AD	DJ		C
NGERH0158QSZ1	578 281 0385	5- 2	AE	DJ		C
NGERH0193FCZZ	572 281 0318	6- 11	AB	DD		C
NGERH0990FCZZ	572 281 1125	3- 26	AB	DJ		C
NGERH1207FCZZ	572 281 1388	4- 12	AF	DS		C
〃	572 281 1388	4- 16	AF	DS		C
〃	572 281 1388	4- 37	AF	DS		C
NKOM-0005QSZZ	578 273 0004	1- 13	AC	DJ		C
〃	578 273 0004	2- 21	AC	DJ		C
NPLYZ0027QSZZ	578 284 0067	4- 28	AD	DJ		C
NROLP0008QSZZ	572 287 1832	4- 30	AD	DJ		C
NROLP0087QSZZ	578 287 0368	2- 28	AD	DJ		C
NROLP1060FCZZ	572 287 1396	2- 7	AF	DS		C
NROLR0052QSZZ	578 287 0319	2- 15	AN	EQ		C
NROLR0054QSZZ	578 287 0321	3- 27	AP	EQ		C
NROLR0055QSZ1	578 287 0341	3- 23	AR	EQ		C
NSFTZ0044QSZZ	578 290 0199	5- 7	AC	DJ		C
NSFTZ0045QSZZ	578 290 0200	5- 5	AC	DJ		C
NSFTZ0047QSZZ	578 290 0202	6- 19	AP	EQ		C
NSFTZ0048QSZZ	578 290 0203	1- 12	AG	DX		C
〃	578 290 0203	2- 22	AG	DX		C
NSFTZ0050QSZ1	578 290 0208	3- 13	AH	DX		C
NSFTZ0054QSZZ	578 290 0205	2- 6	AE	DJ		C
NSFTZ0060QSZZ	578 290 0214	5- 8	AC	DJ		C
NSFTZ0064QSZZ	578 290 0221	2- 27	AD	DJ		C
【P】						
PCLC-0011QSZZ	578 316 0038	4- 26	AS	EQ		B
PCLC-0014QSZZ	578 316 0037	4- 7	AS	EQ		B
PCLC-0015QSZZ	578 316 0041	4- 44	AS	EQ		B
PCOVP0061QSZ1	578 323 0254	5- 11	AH	DX	N	C
PCOVP0063QSZB	578 323 0291	1- 10	AD	DJ	N	C
PCOVP0064QSZZ	578 323 0226	3- 8	AD	DJ		C
PCOVP0070QSZZ	578 323 0215	3- 2	AD	DJ		C
PCOVP0084QSZZ	578 323 0229	4- 1	AE	DJ		C
PCOVP0089QSZZ	578 323 0263	2- 12	AD	DJ		C
PCOVP0096QSZZ	578 323 0289	6- 26	AN	EQ	N	D
PGiDM0068QSZZ	578 345 0345	2- 4	AP	EQ		C
PGiDM0070QSZ1	578 345 0394	6- 6	AM	EG		C
PGiDM0071QSZZ	578 345 0358	6- 9	AL	EB		C
PGiDM0074QSZZ	578 345 0348	2- 23	AK	DX		C
PSHEZ0249QSZZ	578 403 0633	4- 31	AB	DJ		C
PSHEZ0250QSZZ	578 403 0634	4- 29	AB	DJ		C
PSHEZ0274QSZZ	578 403 0656	6- 4	AC	DJ		C
PSHEZ0276QSZZ	578 403 0714	4- 51	AB	DJ		C
PSHEZ0277QSZZ	578 403 0715	4- 52	AA	DJ		C
PSHEZ0278QSZZ	578 403 0716	1- 24	AE	DJ		C
PSHEZ0301QSZZ	578 403 0680	2- 29	AC	DJ		C
PSHEZ0302QSZZ	578 403 0681	2- 30	AC	DJ		C
PSHEZ0325QSZZ	578 403 0719	1- 22	AB	DJ		C
PSHEZ0378QSZZ	578 403 0803	2- 14	AG	DX		C
PTPE-0021QSZZ	578 423 0061	6- 7	AD	DJ		C
【Q】						
QCNCM0068QSZZ	578 510 0272	8- 1	AL	EB		C
QCNCM0071QSZZ	578 510 0273	8- 2	AL	EB		C
QCNCM0923FC14	572 510 0937	8- 3	AE	DJ		C
QCNCM2401SC0C	595 510 0762	8- 4	AB	DJ		C
QCNCM7014SC0C	595 510 0338	8- 5	AA	DD		C
QCNCM7014SC0E	595 510 0744	8- 6	AB	DJ		C

PARTS CODE	JAPAN ONLY ORDER CODE	NO.	PRICE R.		NEW	P/R
			Ex.	Ja.		
QCNCM7014SC0H	595 510 0348	8- 7	AB	DD		C
QCNCP0340QCZZ	572 510 0921	8- 8	AC	DJ		C
QCNCP0341QCZZ	572 510 0922	8- 9	AC	DJ		C
QSW-B0017QSZZ	572 530 0719	3- 14	AF	DS		B
【R】						
RCŌRF1036ACZZ	596 615 0107	4- 46	AP	EQ		C
RHET-0006QSZZ	578 623 0004	1- 17	AQ	EQ		B
RMŌTS0030QSZZ	578 630 0115	4- 38	BA	FX		B
RPLU-0026QSZ1	578 647 0024	3- 9	AR	EQ		B
【S】						
SPAKA0392QSZZ	578 902 0302	7- 6	AD	DJ		D
SSAKA0231QCZZ	541 906 1003	7- 10	AA	DD		D
SSAKH2002WCZZ	541 906 1017	7- 3	AE	DJ		D
SSAKH3012KCZZ	588 906 0009	7- 3	AD	DJ		D
【T】						
TCADZ0288QSZZ	572 913 1007	7- 9	AD	DJ	N	D
TCADZ1275FCZZ	572 913 0734	7- 8	AB	DJ		D
TLABH0484QSZZ	572 917 3762	7- 11	AE	DS	N	D
TLABH0486QSZZ	572 917 3763	7- 11	AE	DS	N	D
TLABS4306FCZZ	572 917 3307	1- 26	AC	DJ		D
【V】						
VCEAGA1VW106M	572 594 0093	8- 10	AA	DD		C
VCEAGU1CW106M	571 594 0095	8- 11	AA	DD		C
VCEAZA1VW476M	578 594 0149	8- 12	AC	DD		C
VCKYCY1EF104Z	507 591 5036	8- 13	AA	DD		C
VCKYCY1HB102K	594 593 0044	8- 14	AA	DD		C
VCKYCY1HB222K	595 593 0027	8- 15	AA	DD		C
VCKYCY1HB332K	595 593 1209	8- 16	AA	DD		C
VCKYCY1HF473Z	594 593 0207	8- 17	AA	DD		C
VHEUDZ3.9B/-1	596 571 0169	8- 18	AC	DJ		B
VHiC74HC151M-1	578 573 1185	8- 19	AD	DJ		B
VHiCKA78S05P-1	578 573 1138	8- 20	AE	DJ		B
VHiCMTD13611-1	578 573 1140	8- 21	AR	EQ		B
VHiCT62001AP-1	578 573 1214	8- 22	AH	DX		B
VHViCPN38//-1	585 577 0022	8- 23	AF	DS		B
VHViCPN50//-1	594 577 0003	8- 24	AE	DJ		B
VRD-HT2EY362J	572 581 0031	8- 25	AA	DD		C
VRD-HT2HY152J	571 581 0411	8- 26	AA	DD		C
VRS-CY1JD102J	571 581 0007	8- 27	AA	DD		C
VRS-CY1JD103J	500 581 5097	8- 28	AA	DD		C
VRS-CY1JD152F	567 581 0441	8- 29	AA	DD		C
VRS-CY1JD152J	571 581 0003	8- 30	AA	DD		C
VRS-CY1JD242J	596 581 2169	8- 31	AA	DD		C
VRS-CY1JD470J	571 581 0877	8- 32	AA	DD		C
VRS-CY1JD471F	596 581 2161	8- 33	AB	DD		C
VRS-CY1JD622F	500 581 5120	8- 34	AA	DD		C
VRS-CY1JD752J	596 581 0258	8- 35	AA	DD		C
VRS-RE3AA1R5J	578 581 0316	8- 36	AB	DD		C
VSDTC114EKA-1	595 576 0491	8- 37	AC	DJ		B
VSDTC143ZKA-1	594 576 0231	8- 38	AC	DJ		B
VSiMZ4+++++-1	596 576 0655	8- 39	AD	DJ		B
【X】						
XBPSD30P08KS0	541 970 1097	1- 14	AA	DD		C
〃	541 970 1097	2- 20	AA	DD		C
XBPSD40P08KS0	541 970 0013	6- 24	AA	DD		C
XEBSD30P08000	578 970 0105	1- 19	AA	DD		C
〃	578 970 0105	2- 9	AA	DD		C
〃	578 970 0105	4- 3	AA	DD		C
XEBSD30P10000	578 970 0106	2- 11	AA	DD		C
〃	578 970 0106	3- 3	AA	DD		C
XEBSD40P30000	572 970 1429	4- 14	AA	DD		C
XEBSE40P10000	572 970 0575	6- 22	AA	DD		C
XEBSE40P12000	572 970 1447	1- 2	AA	DD		C
〃	572 970 1447	2- 24	AA	DD		C
〃	572 970 1447	4- 15	AA	DD		C
XEPSD30P08X00	595 970 0136	2- 3	AA	DD		C
XHBSE30P08000	595 970 0163	4- 39	AA	DD		C
〃	595 970 0163	4- 42	AA	DD		C
XRESP40-06000	509 399 5001	4- 8	AA	DD		C
XRESP50-06000	572 399 0063	4- 9	AA	DD		C
XRESP70-08000	571 399 0027	6- 16	AA	DD		C
XWHSD50-08120	571 990 0056	4- 48	AA	DD		C

PARTS CODE	JAPAN ONLY ORDER CODE	NO.	PRICE R.		NEW	P/R
			Ex.	Ja.		

注 意

・電池を正しく交換しないと爆発を起こす危険がある。

・機器製造者が指定したものと同一型名のもの、又は、
その同等の電池とのみ交換すること。

・使用済みの電池は、製造者の指示に従って処分すること。

CAUTION FOR BATTERY REPLACEMENT

(Danish) ADVARSEL !
Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandoren.

(English) Caution !
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type
recommended by the manufacturer.
Dispose of used batteries according to manufacturer's instructions.

(Finnish) VAROITUS
Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan
tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden
mukaisesti.

(French) ATTENTION
Il y a danger d'explosion s' il y a remplacement incorrect
de la batterie. Remplacer uniquement avec une batterie du
même type ou d'un type équivalent recommandé par
le constructeur.
Mettre au rebut les batteries usagées conformément aux
instructions du fabricant.

(Swedish) VARNING
Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent
typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens
instruktion.

(German) Achtung
Explosionsgefahr bei Verwendung inkorrekter Batterien.
Als Ersatzbatterien dürfen nur Batterien vom gleichen Typ oder
vom Hersteller empfohlene Batterien verwendet werden.
Entsorgung der gebrauchten Batterien nur nach den vom
Hersteller angegebenen Anweisungen.

CAUTION FOR BATTERY DISPOSAL

(For USA, CANADA)

"BATTERY DISPOSAL"
THIS PRODUCT CONTAINS A LITHIUM PRIMARY
(MANGANESS DIOXIDE) MEMORY BACK-UP BATTERY
THAT MUST BE DISPOSED OF PROPERLY. REMOVE THE
BATTERY FROM THE PRODUCT AND CONTACT YOUR
LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION
ON RECYCLING AND DISPOSAL OPTIONS.

"TRAITEMENT DES PILES USAGÉES"
CE PRODUIT CONTIENT UNE PILE DE SAUVEGARDE DE
MÉMOIRE LITHIUM PRIMAIRE (DIOXYDE DE MANGANÈSE)
QUI DOIT ÊTRE TRAITÉE CORRECTEMENT. ENLEVEZ LA
PILE DU PRODUIT ET PRENEZ CONTACT AVEC VOTRE
AGENCE ENVIRONNEMENTALE LOCALE POUR DES
INFORMATIONS SUR LES MÉTHODES DE RECYCLAGE ET
DE TRAITEMENT.

SHARP

COPYRIGHT © 2003 BY SHARP CORPORATION

All rights reserved.
Printed in Japan.
No part of this publication may be reproduced,
stored in a retrieval system, or transmitted.
In any form or by any means,
electronic, mechanical, photocopying, recording, or otherwise,
without prior written permission of the publisher.

SHARP CORPORATION
Digital Document Systems Group
Products Quality Assurance Department
Yamatokoriyama, Nara 639-1186, Japan
2003 August Printed in Japan ⓣ